


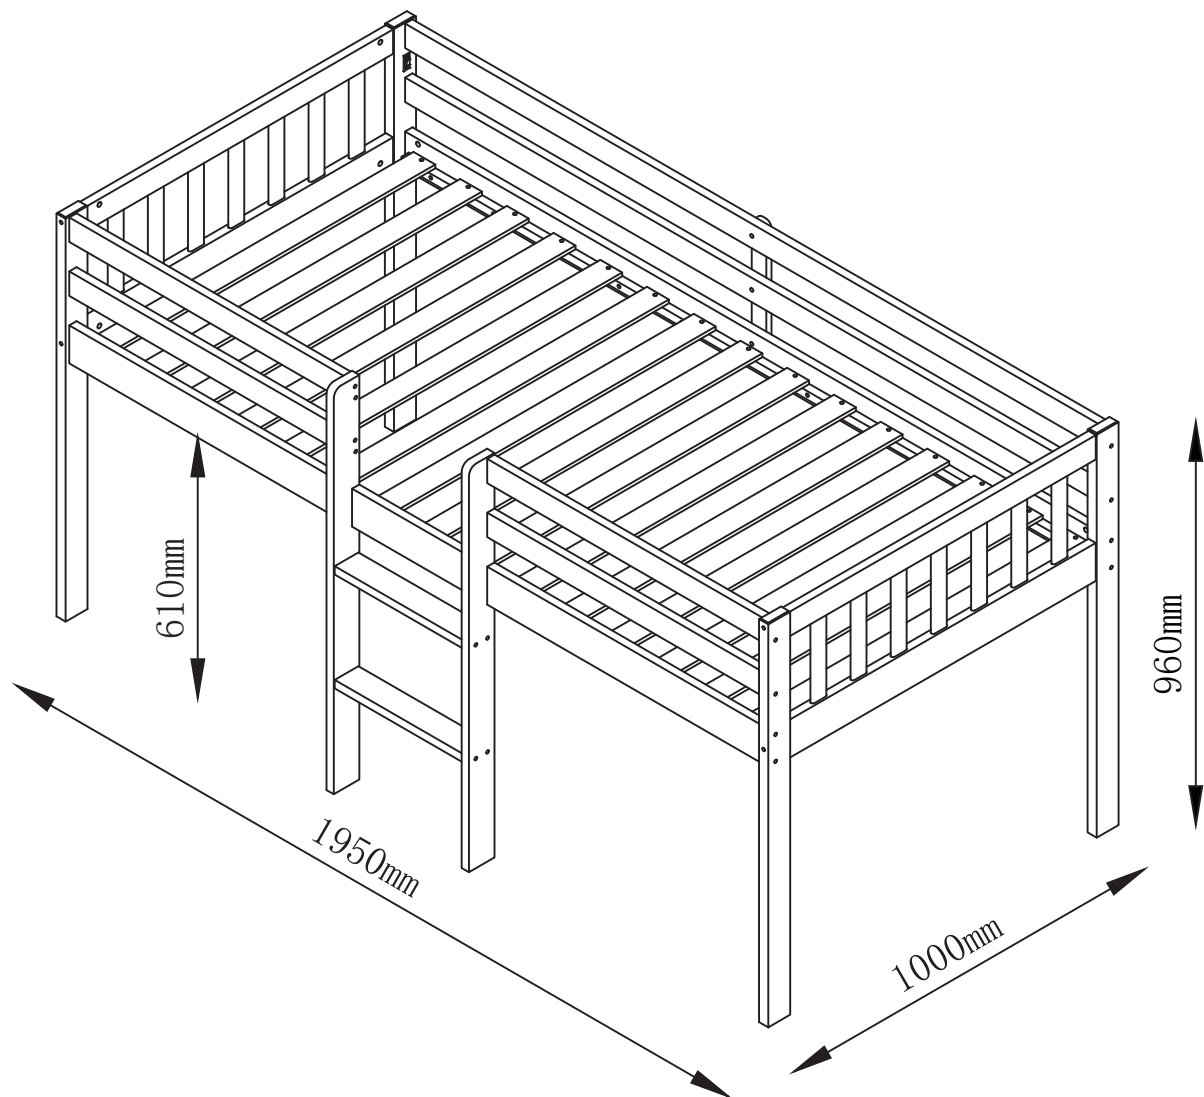


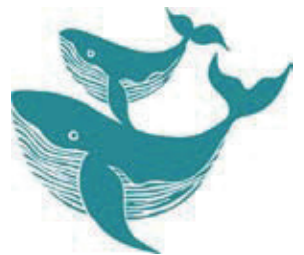

NÖA & NANI
FAMILY FURNITURE

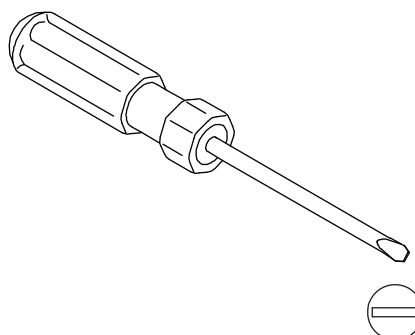


Mira Sleepstation ASSEMBLY INSTRUCTIONS

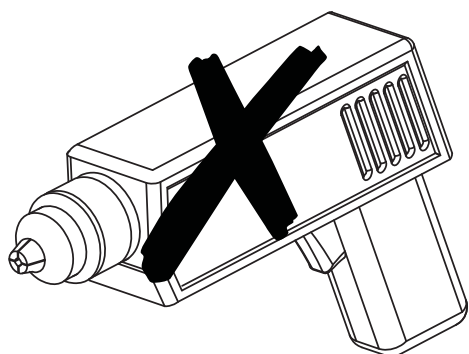

WARNING!

To avoid damage to the product please do not use powertools to assemble this item!!!

Tools Required

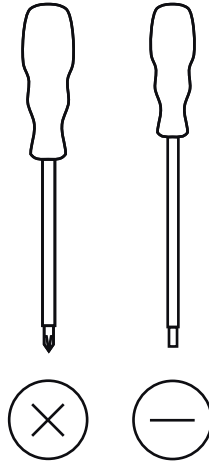

CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact the store of purchase.
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION


- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

WARNING



- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.


DANGER

- CHILDREN MUST BE SUPERVISED.

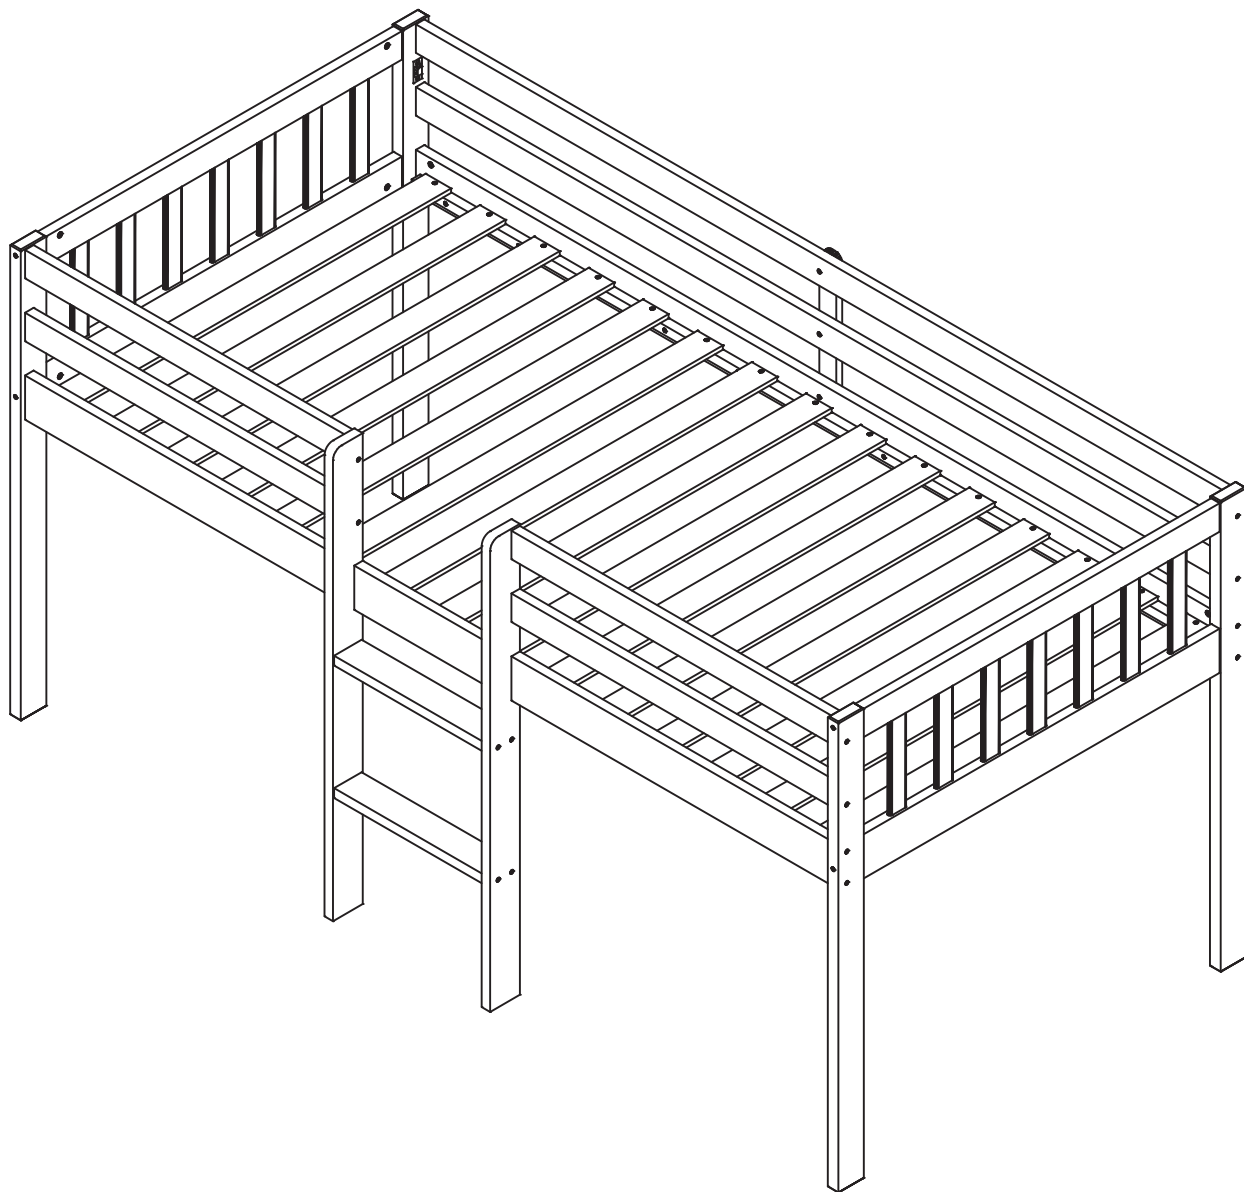


HARDWARE

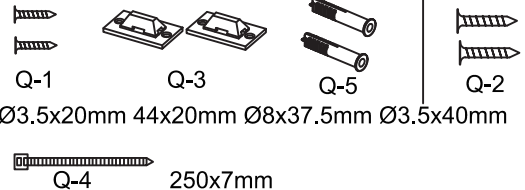A		Ø8x30mm	28
B		M6x100mm	08
C		Ø10x12mm	28
D		M6x70mm	20
E		M8x20mm	03
F		M6x25mm	03
G		Ø7x60mm	08
H		Ø6x60mm	04
J		Ø4x30mm	30
k		Ø8mm	04
P		4mm	02
L	 Q-1 Q-3 Q-5 Q-2 Ø3.5x20mm 44x20mm Ø8x37.5mm Ø3.5x40mm Q-4 250x7mm		

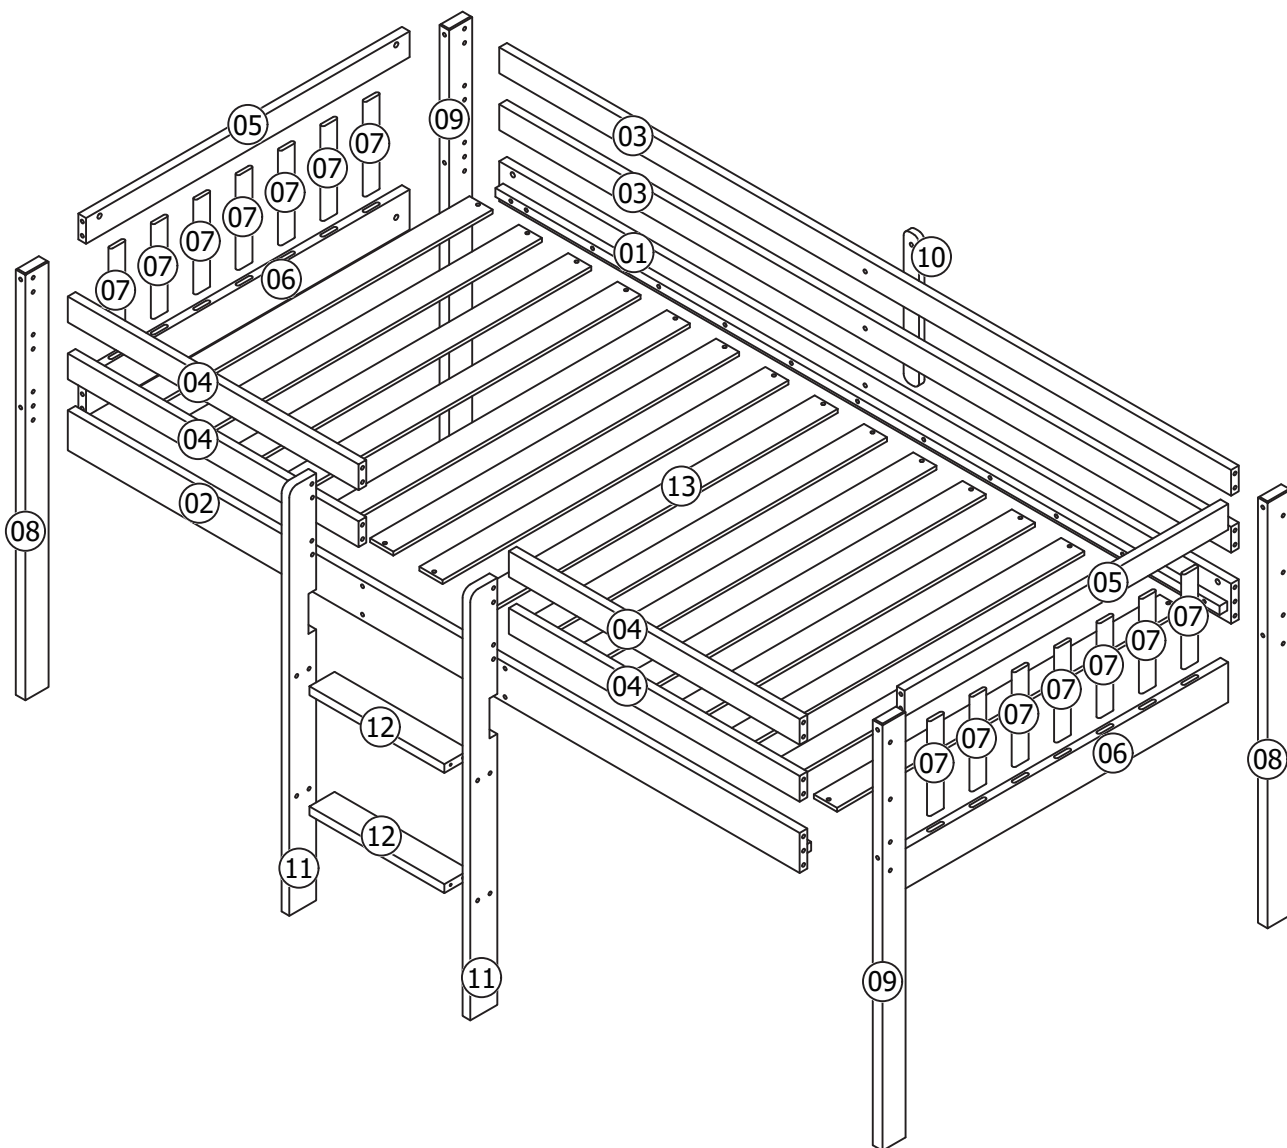


01


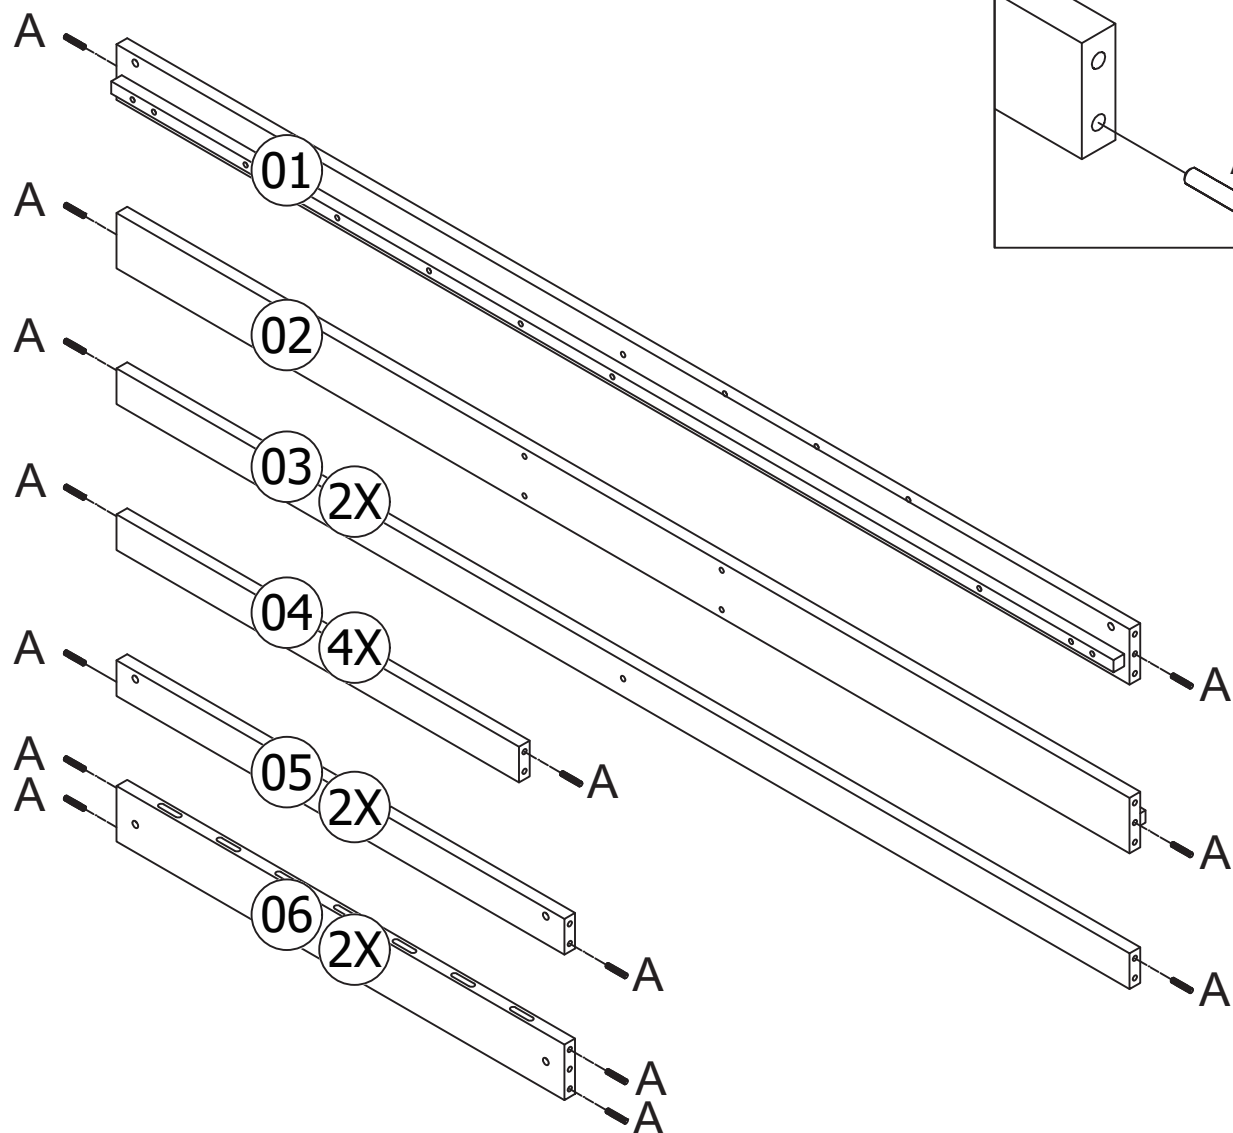


A		Ø8x30mm	28
---	---	---------	----

02

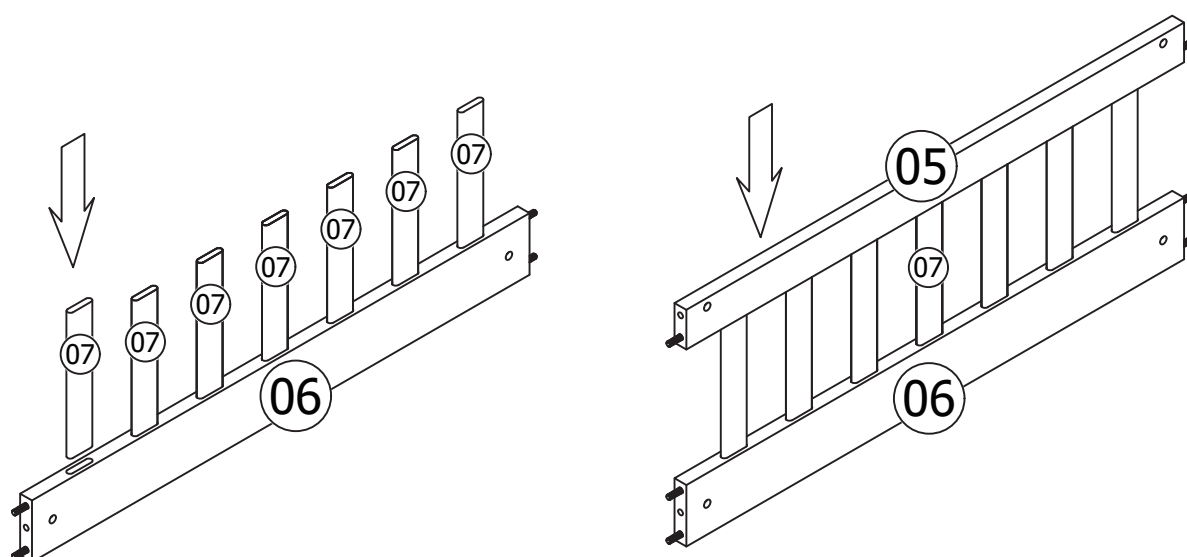



03

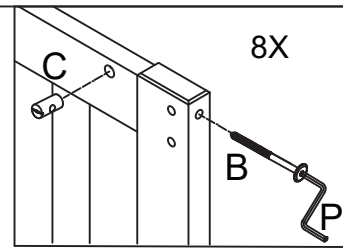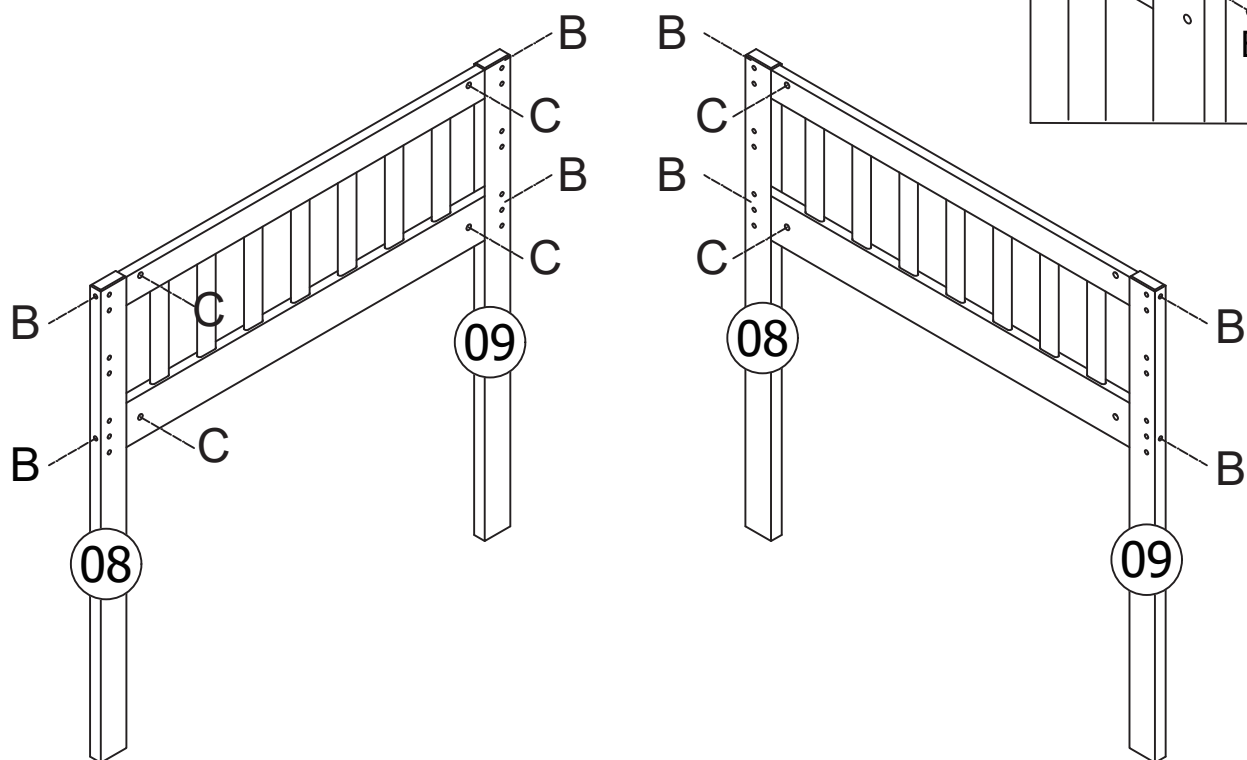

P		4mm	01
---	--	-----	----

B		15mm M6x100mm	08
C		Ø10x12mm	08



04

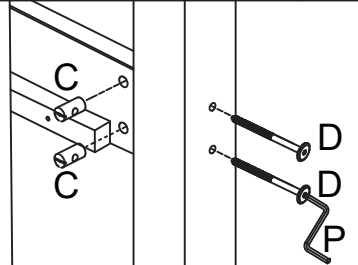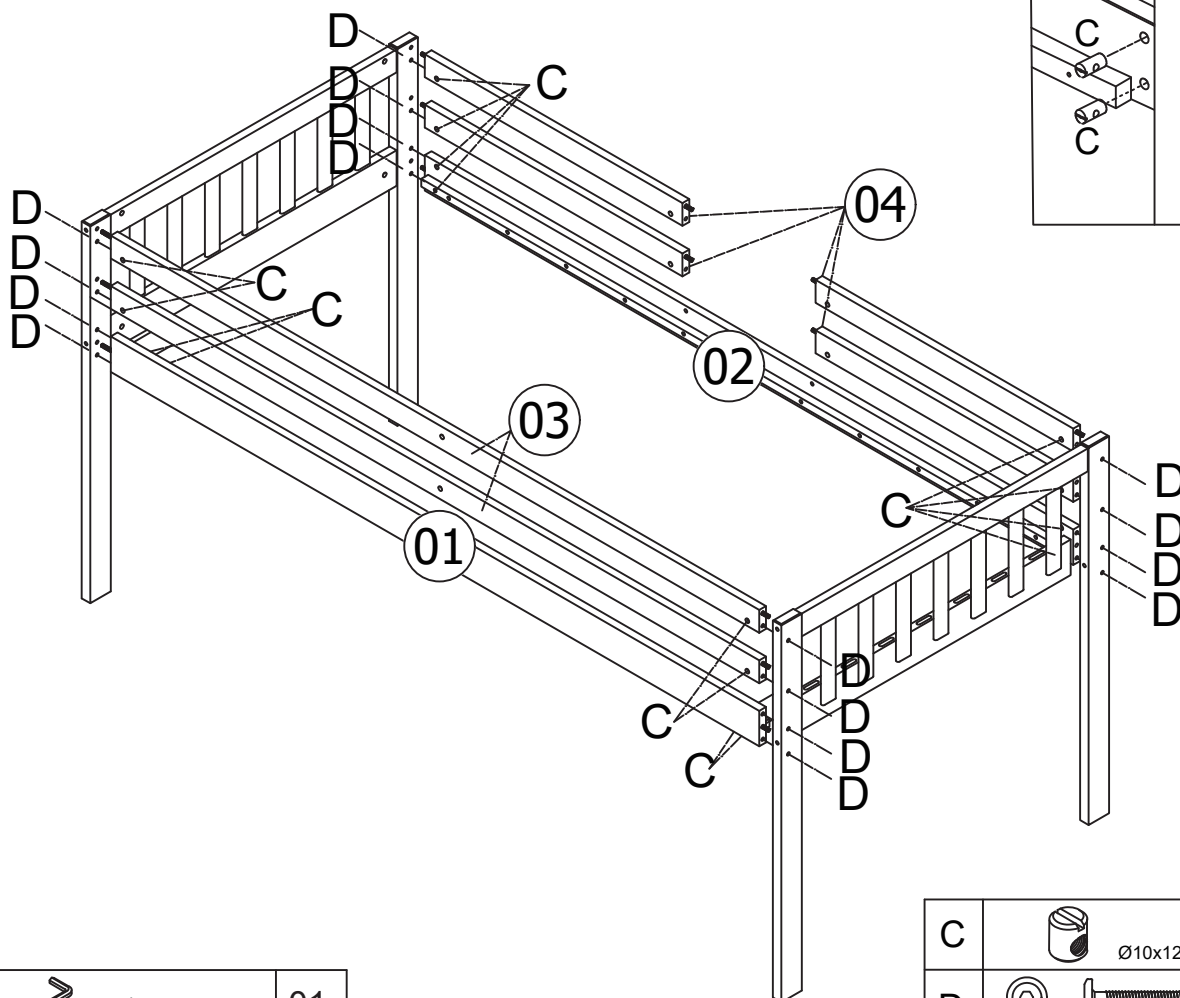

P		4mm	01
---	--	-----	----

C		Ø10x12mm	16
D		15mm M6x70mm	16



05

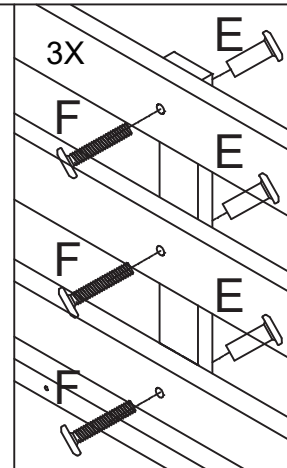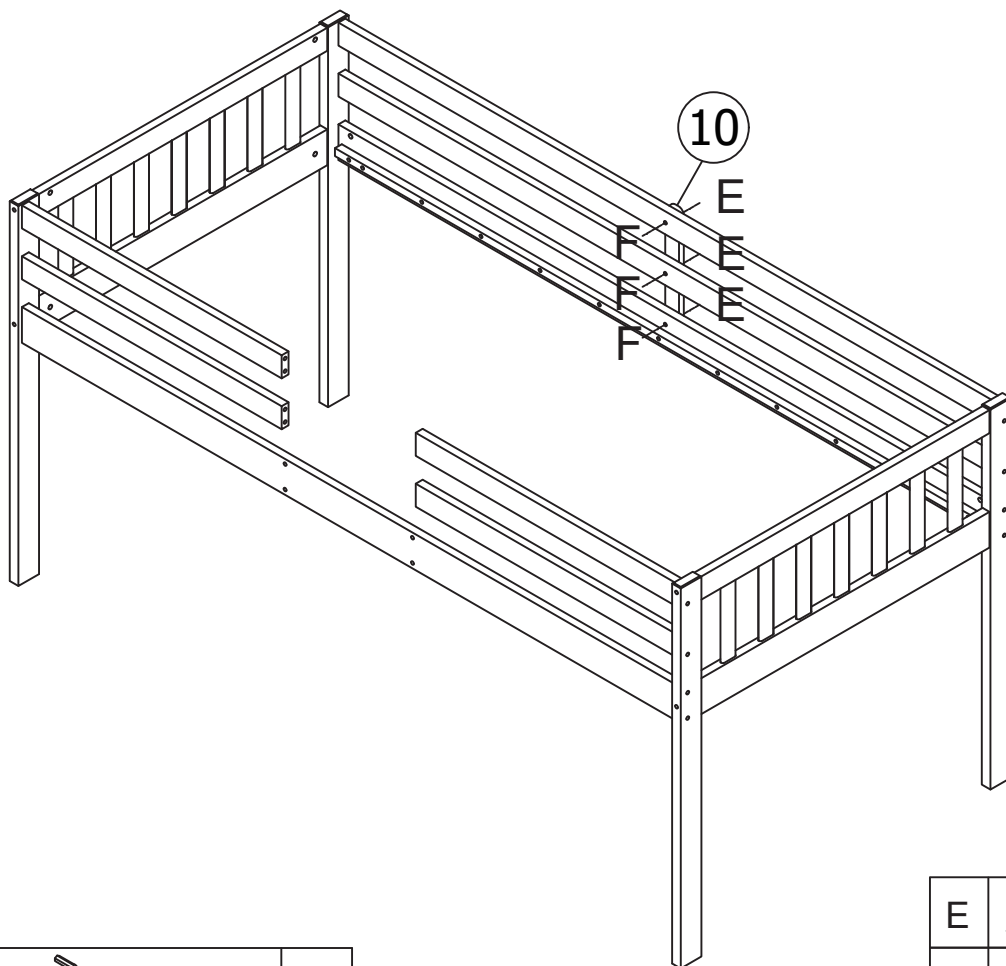

P		4mm	02
---	--	-----	----

E		15mm	M8x20mm	03
F		15mm	M6x25mm	03



06

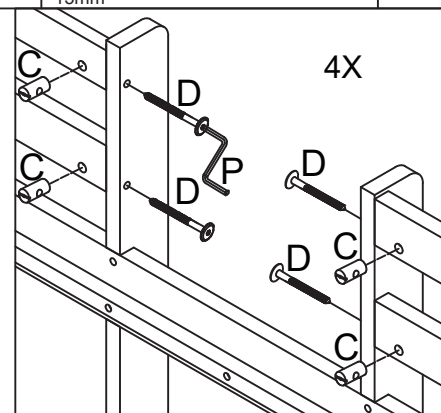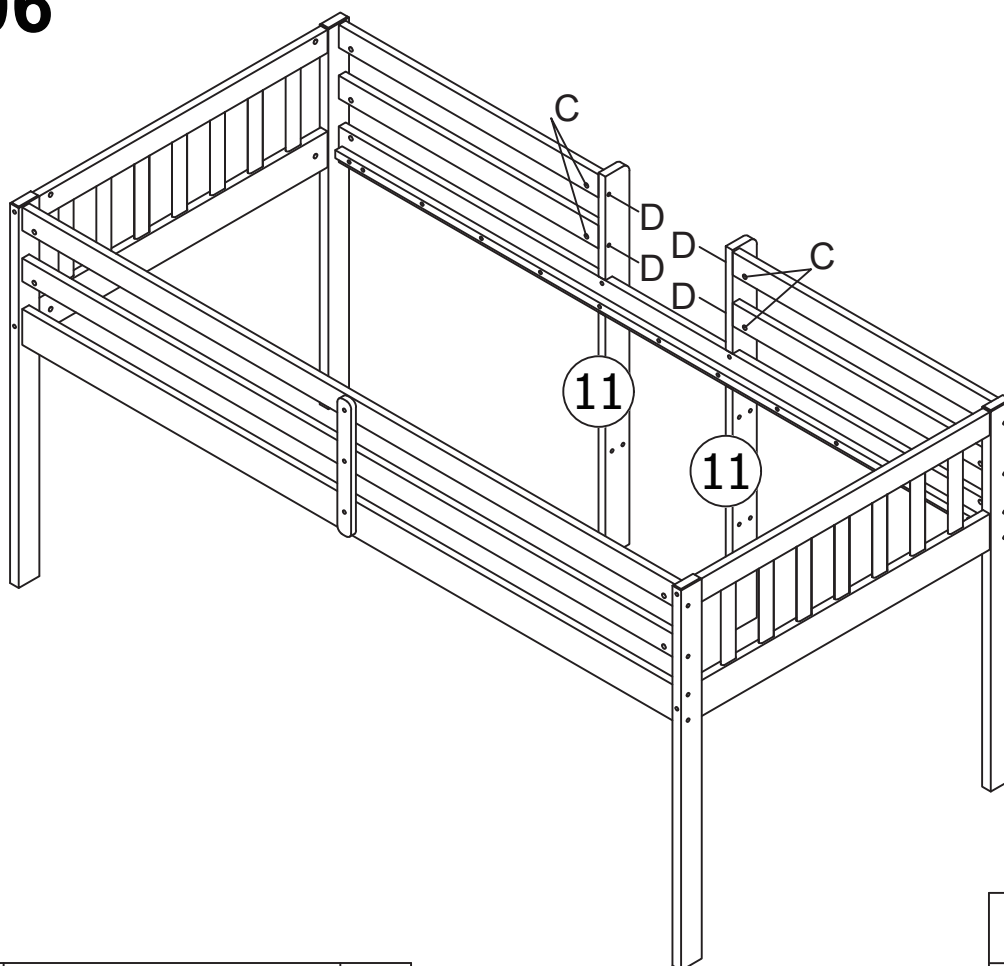

P		4mm	01
---	--	-----	----

C		Ø10x12mm	04
D	 15mm	 M6x70mm	04

07

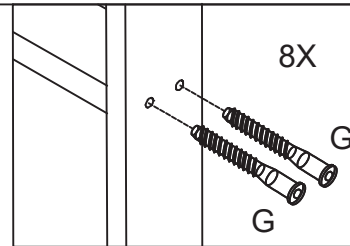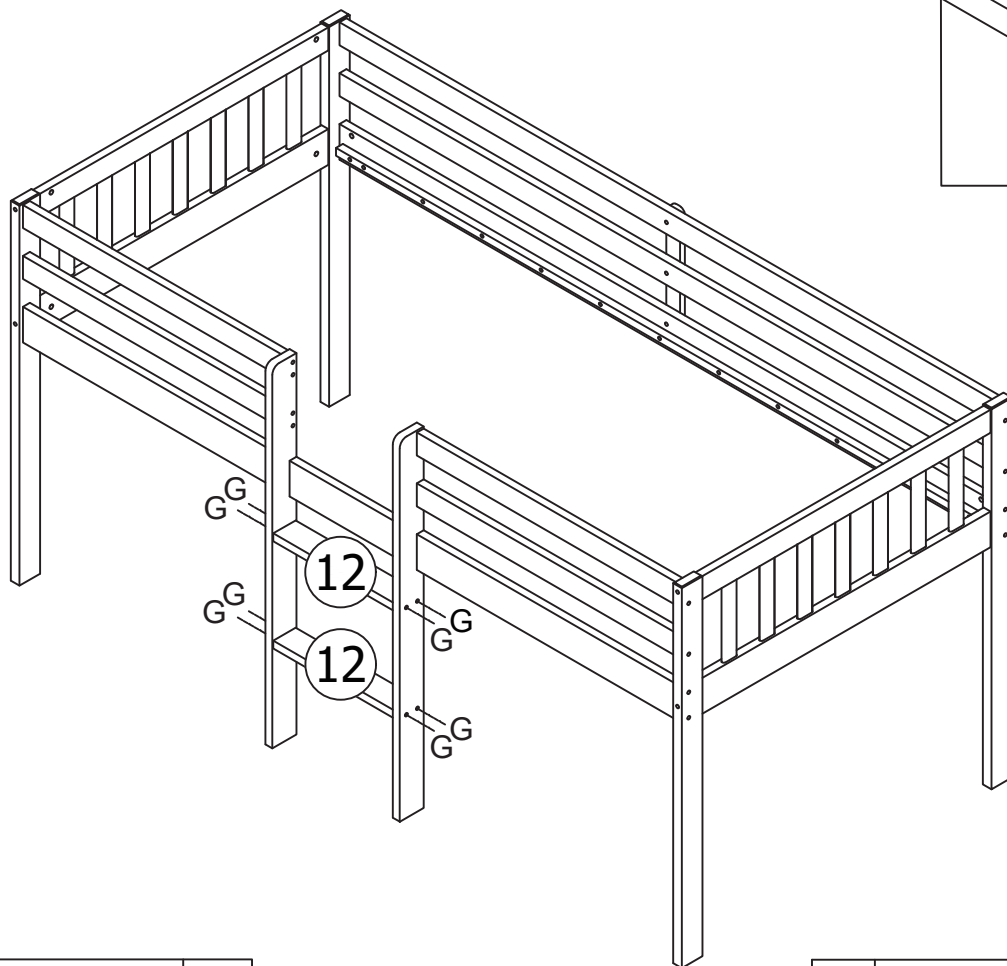

P



4mm

01

G





10mm



Ø7x60mm

08

08

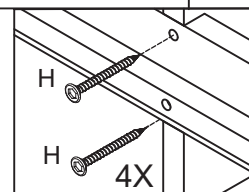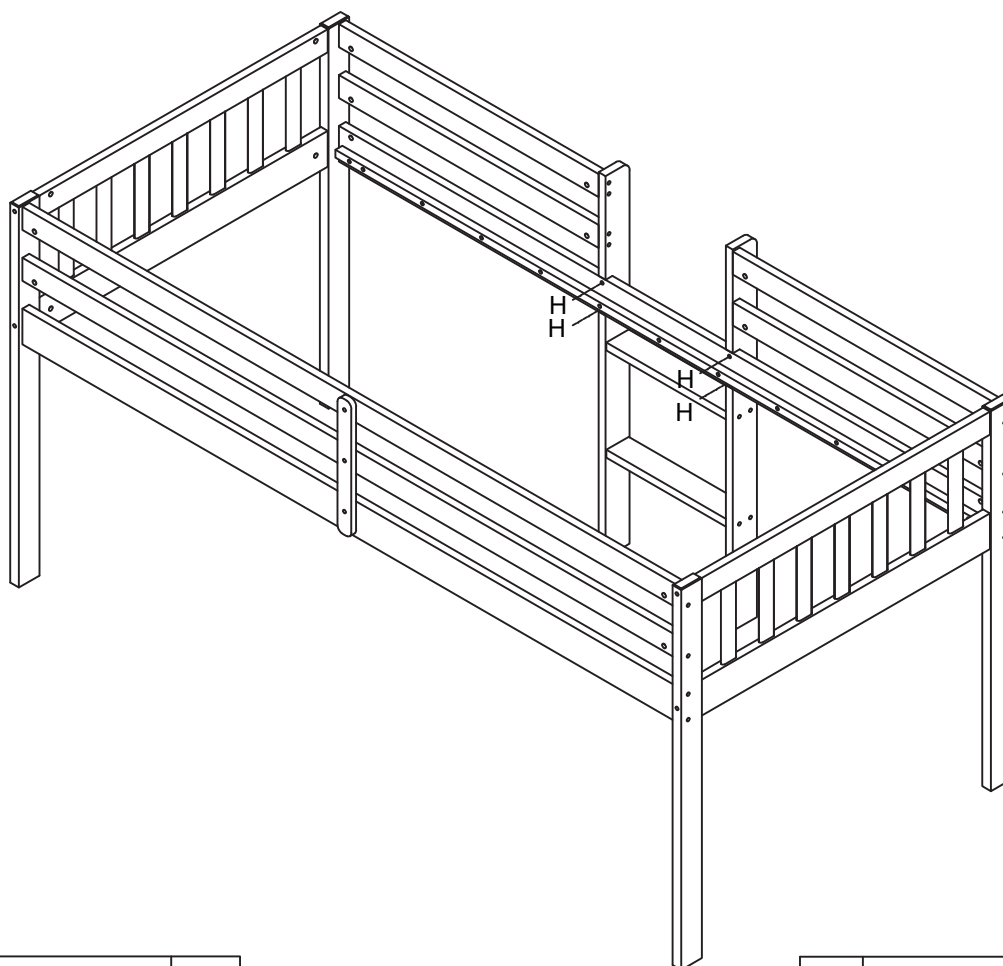

P



4mm

01



H



Ø7x60mm

04

09


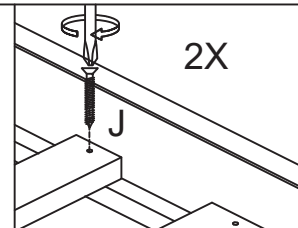
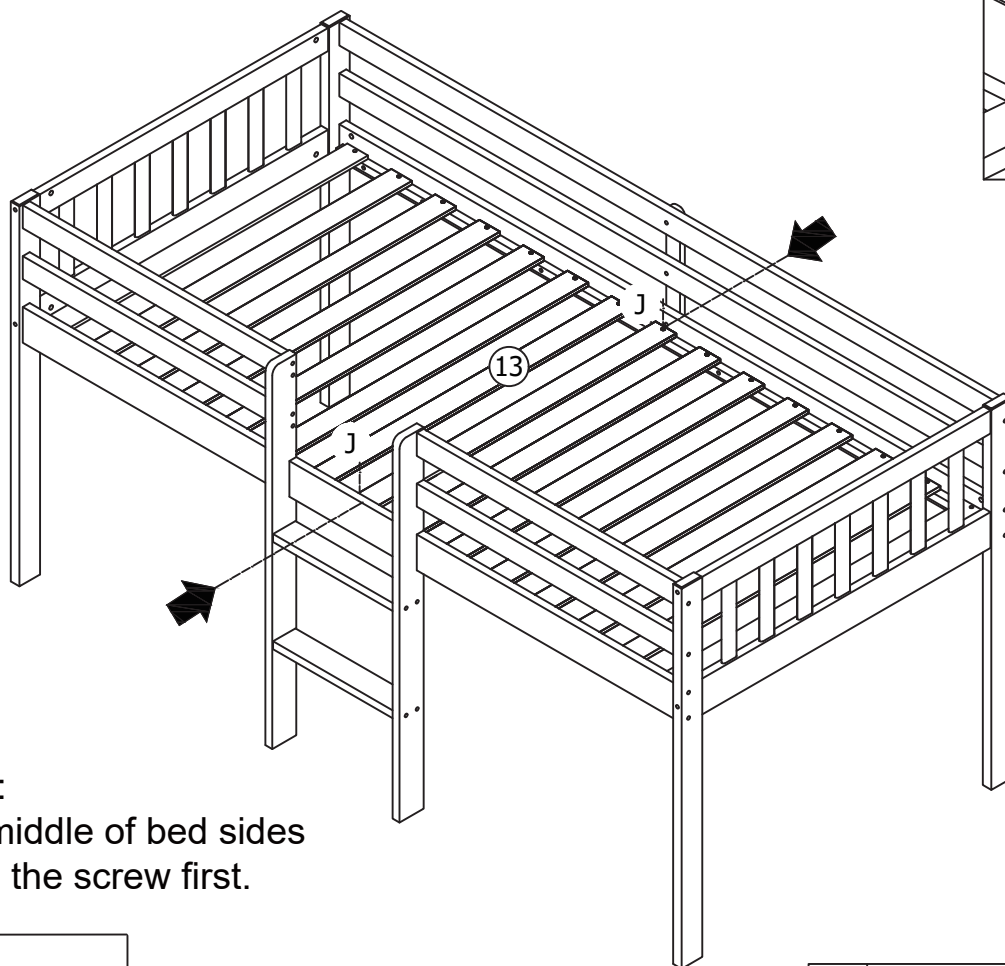


WARNING:
Press the middle of bed sides
and tighten the screw first.




J	8mm	Ø4x30mm	02
---	-----	---------	----

10

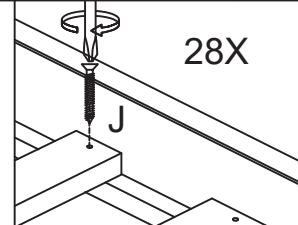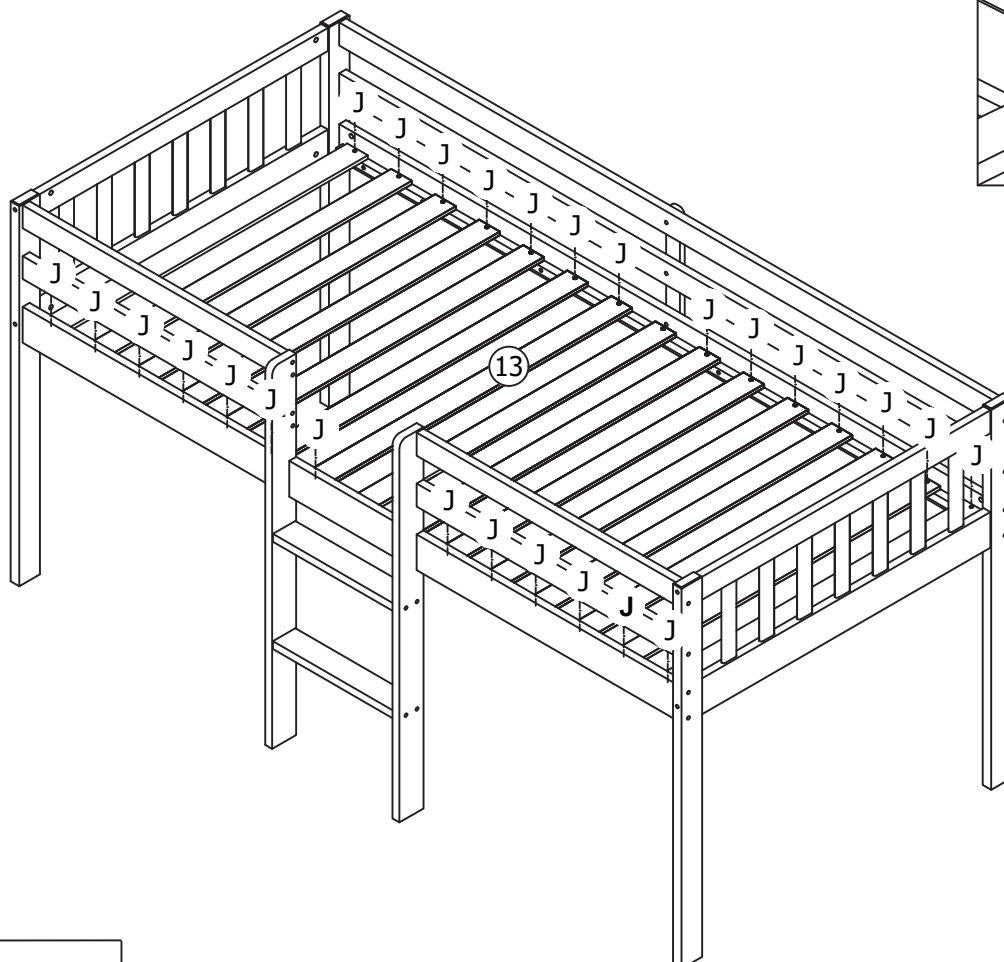


J	8mm	Ø4x30mm	28
---	-----	---------	----

11

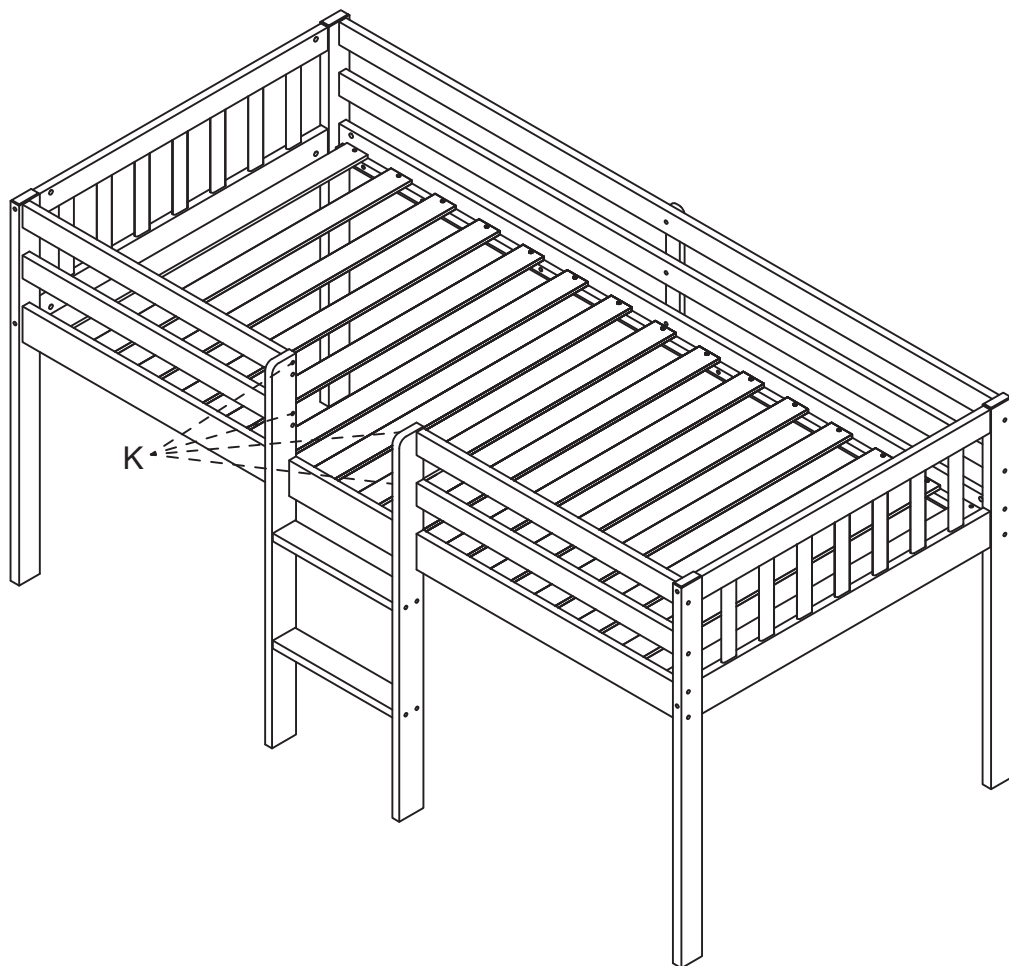

K			Ø8mm	04
---	---	---	------	----

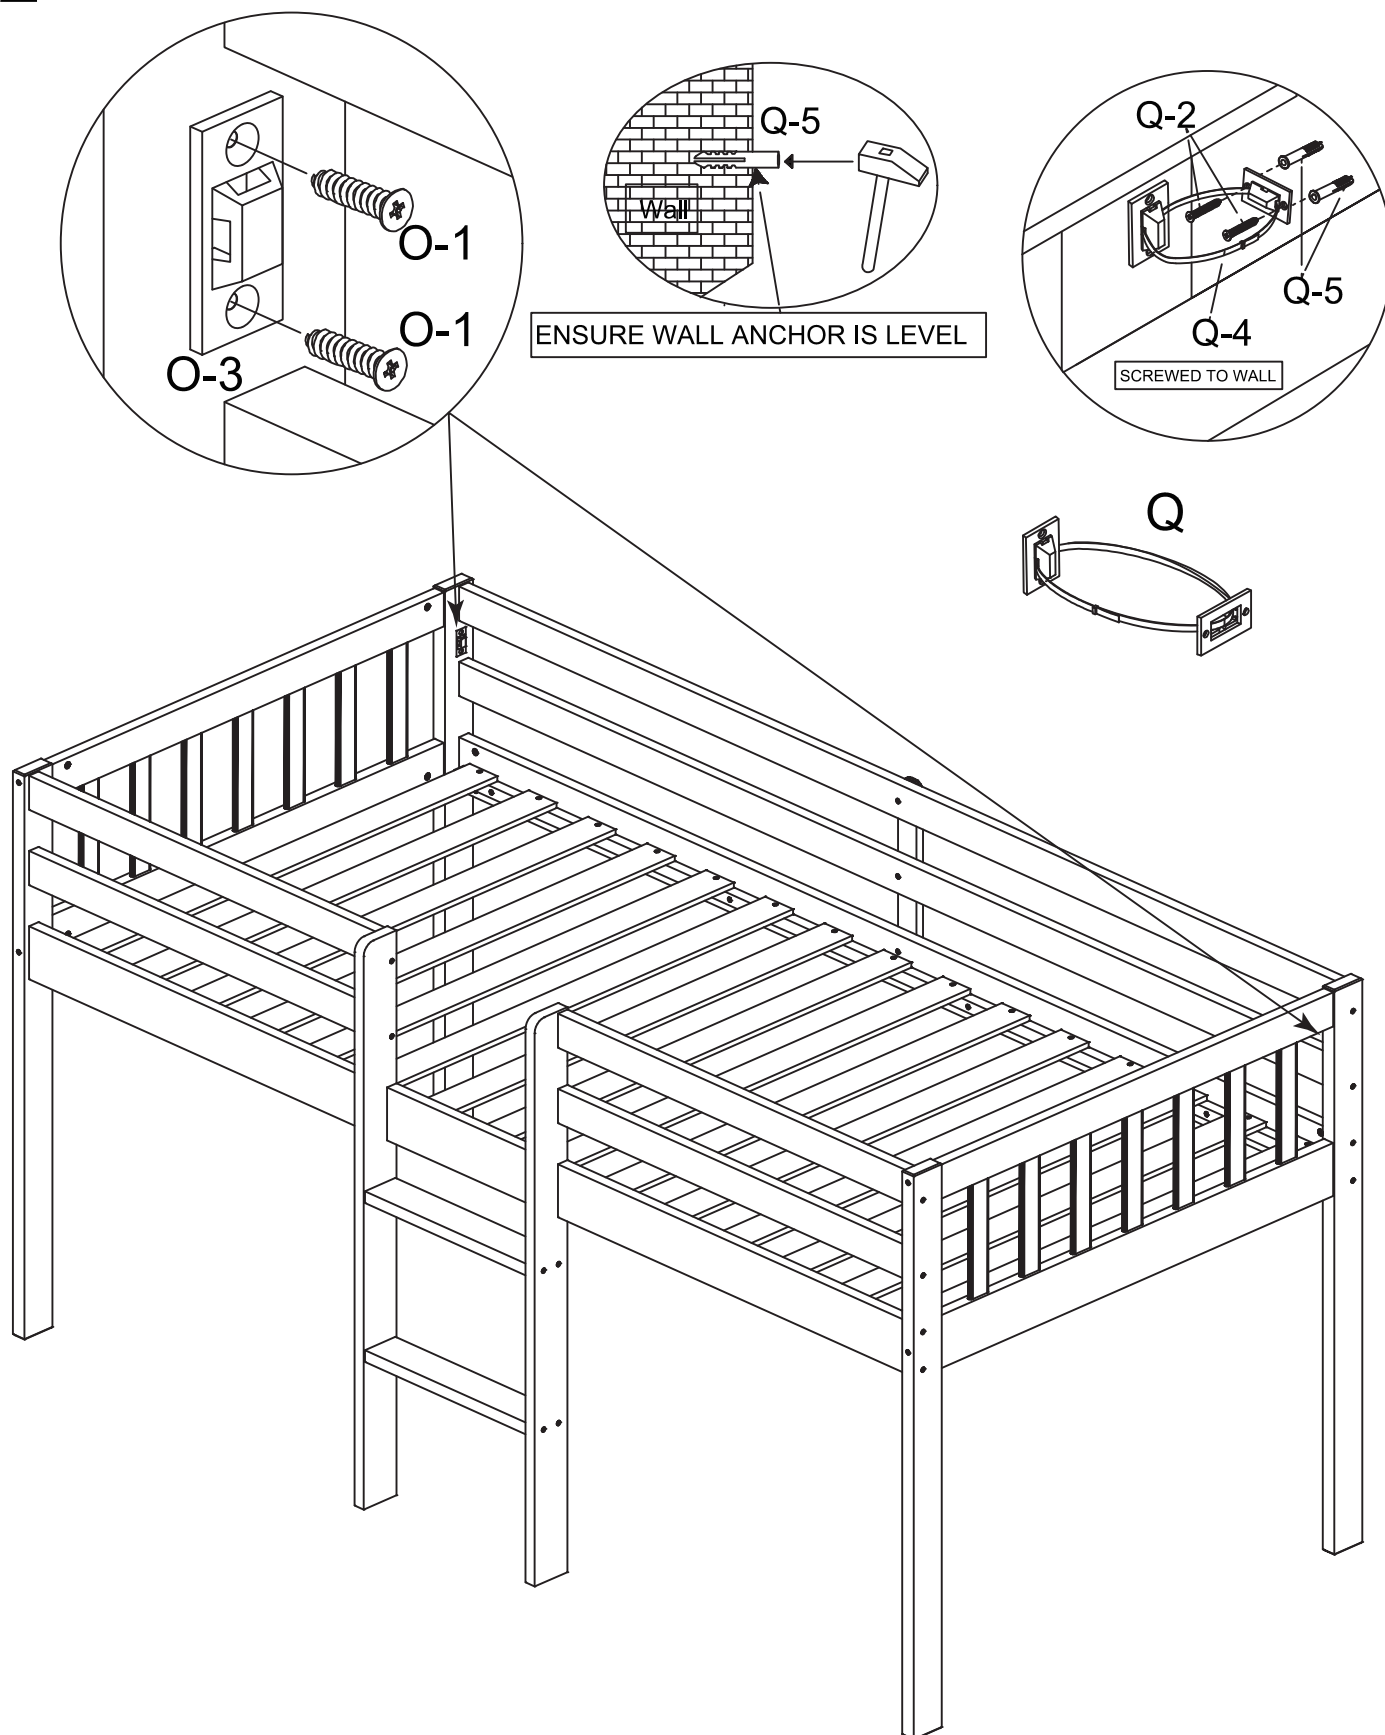

Wall Mount Assembly:


Affix Anti-Tipping Bracket (Q3) to Legs (3+4) using Screw (Q1) .


Insert Wall Anchors (Q5) into Wall.

Affix Anti-Tipping Bracket (Q3) with (Q5) using Screw (Q2)


L					
	Q-1 Ø3.5x20mm	Q-3 44x20mm	Q-5 Ø8x37.5mm	Q-2 Ø3.5x40mm	Q-4 250x7mm

13

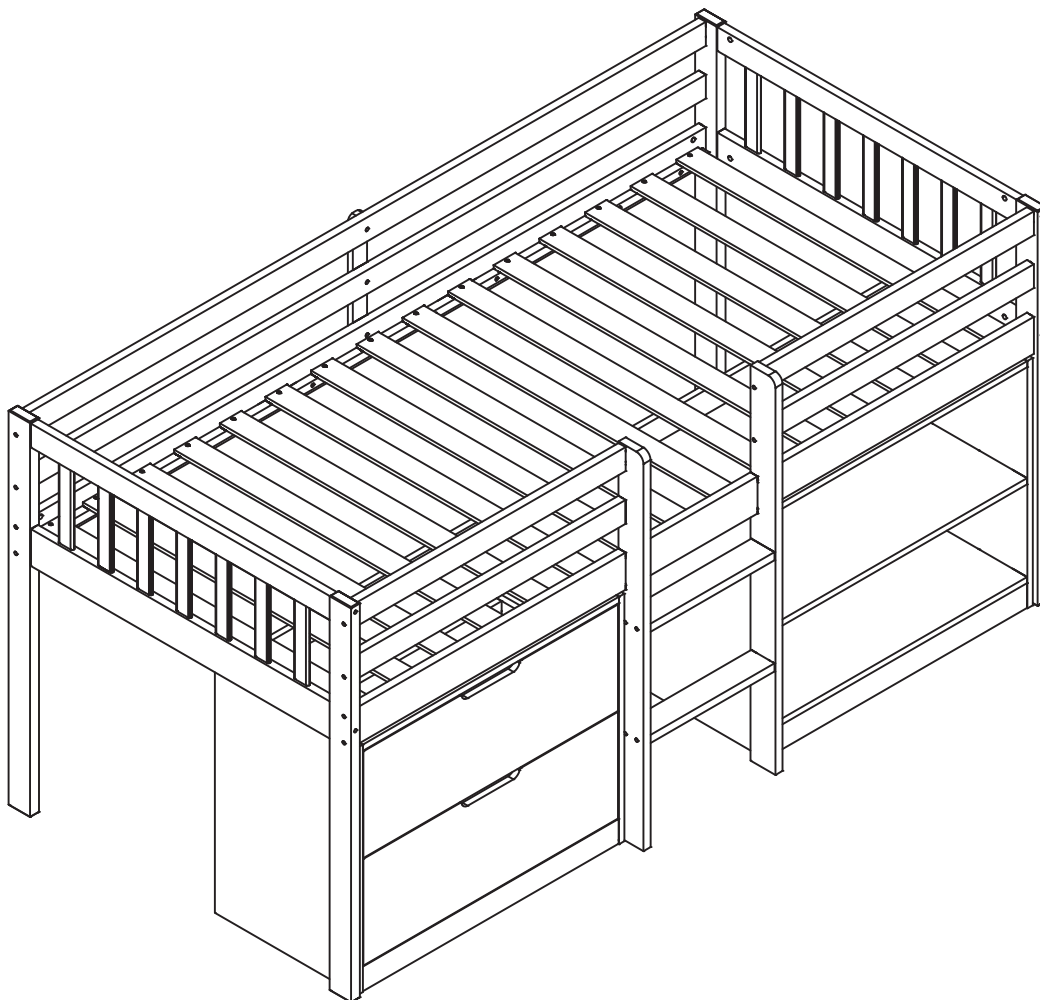


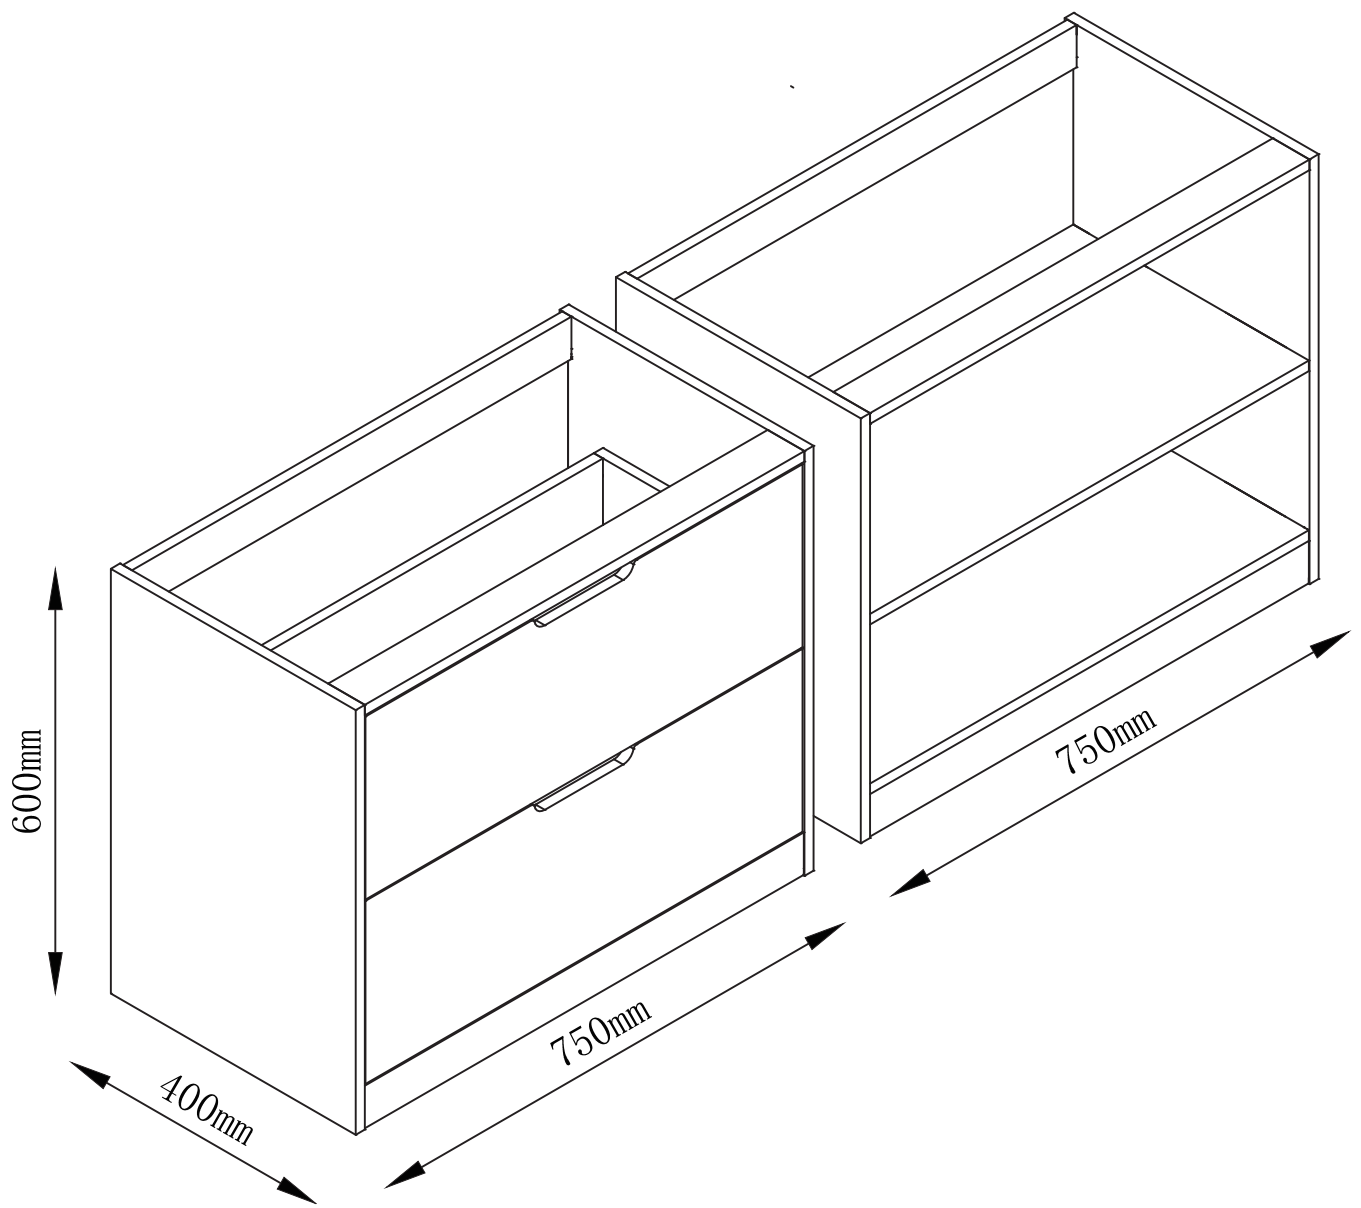



NÖA & NANI
FAMILY FURNITURE

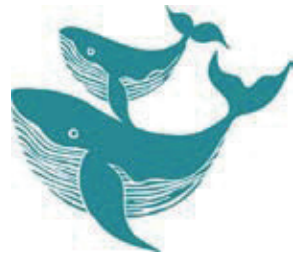


Mira Sleepstation ASSEMBLY INSTRUCTIONS


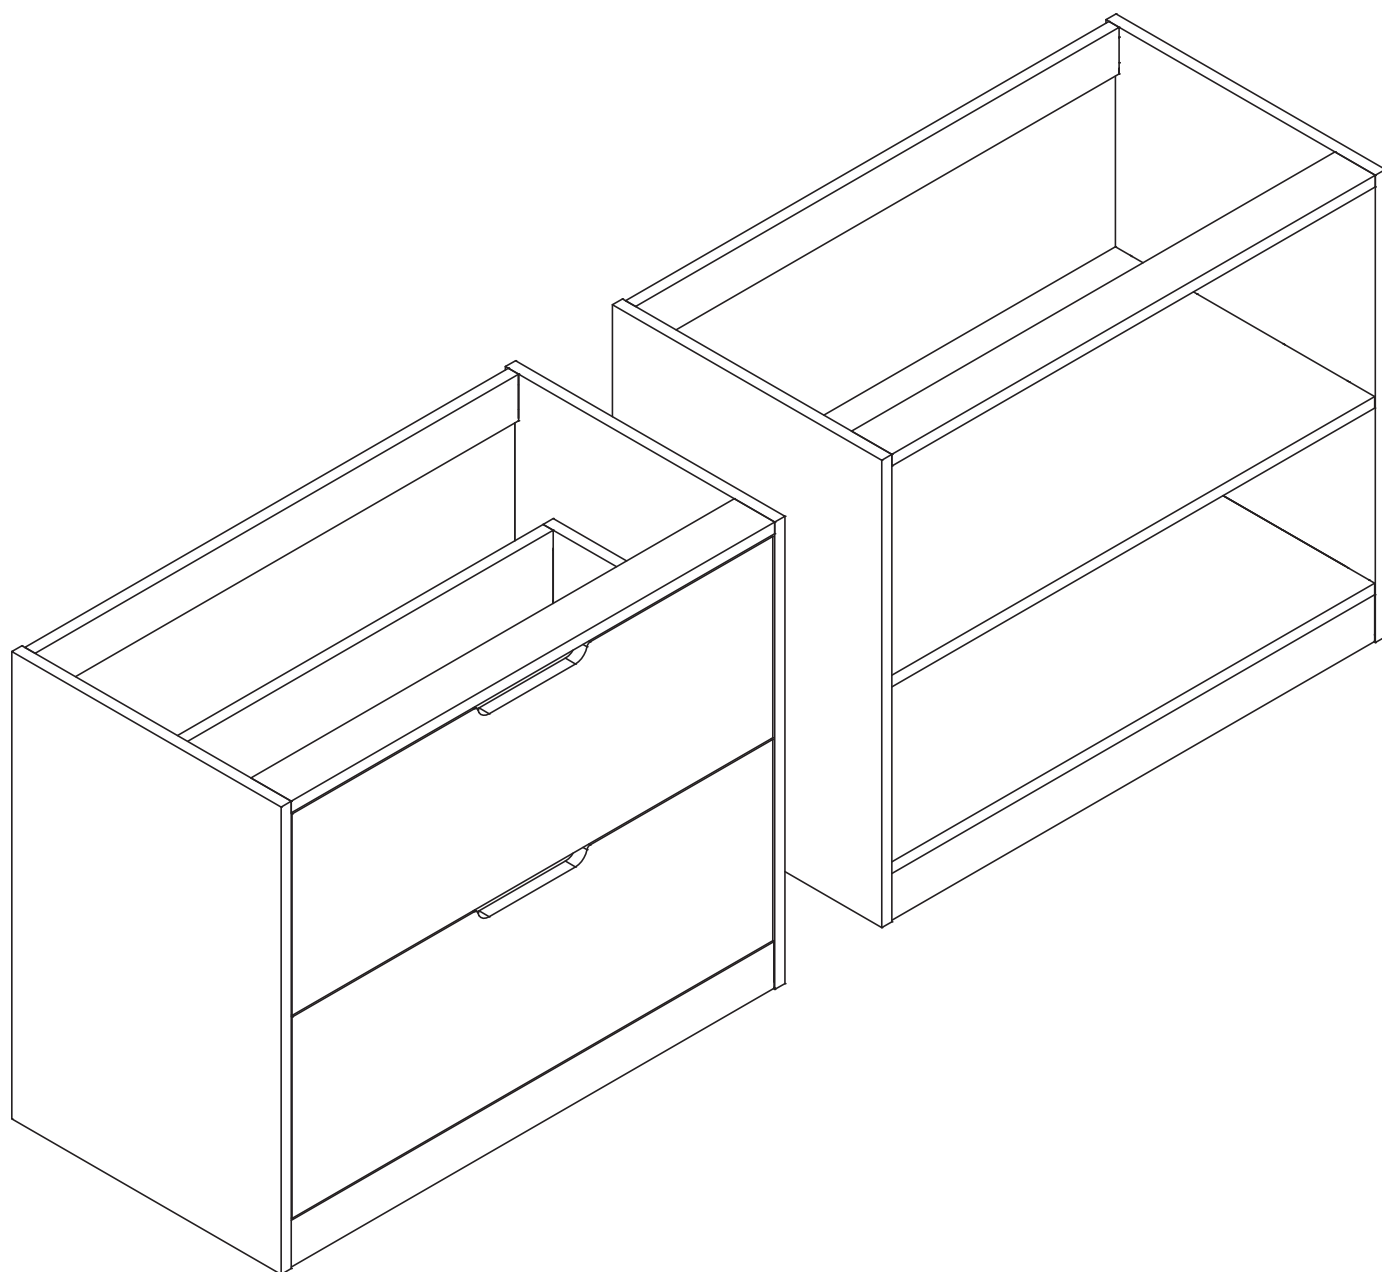


HARDWARE

A		Ø8x30mm	22		F		RIGHT OR LEFT	04
B		M6x40mm	43		G		Ø3.5x14mm	56
C		Ø15x11mm	43		H		Ø21mm	08
D		10mm			J		50x15x2mm	08
E		Ø5x40mm	12		K		15x13x10mm	32



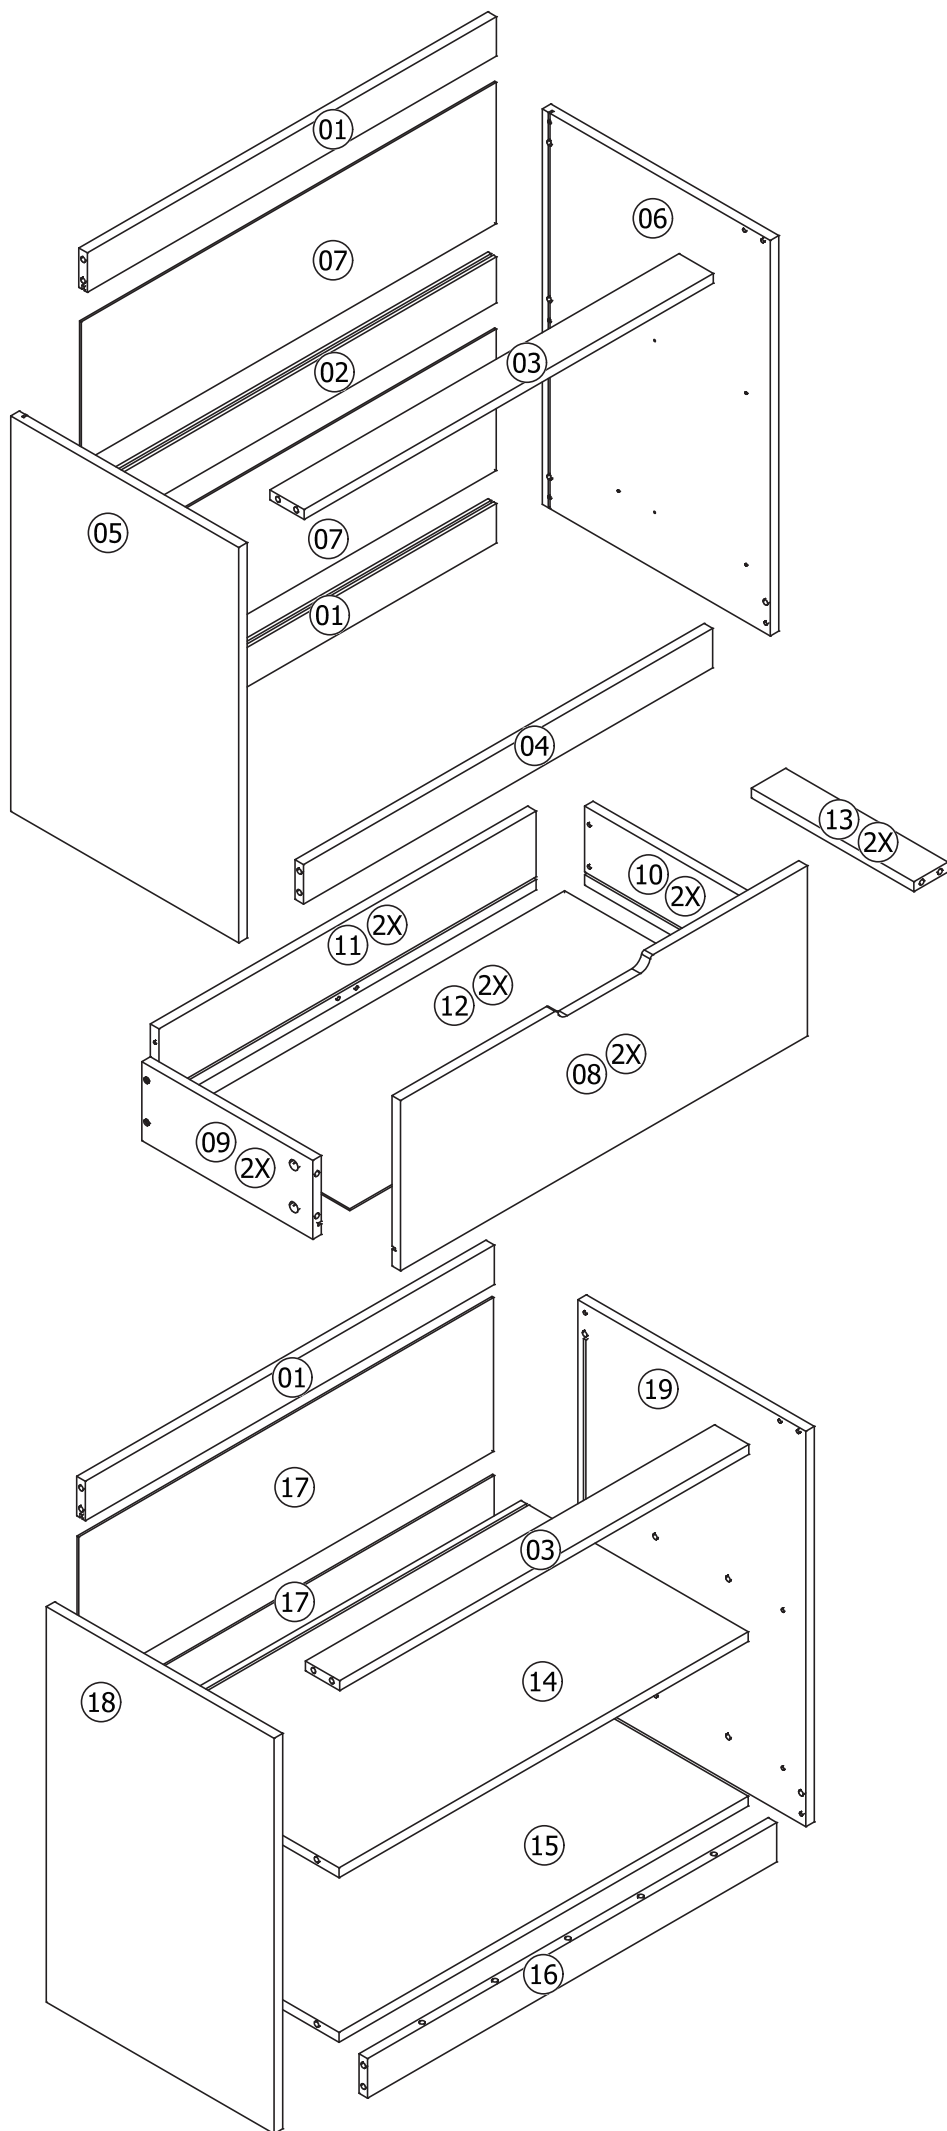


01




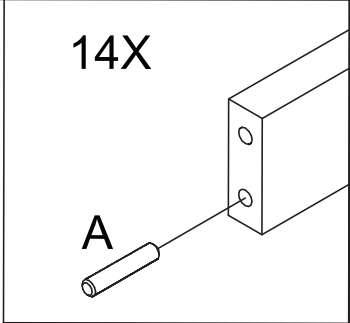
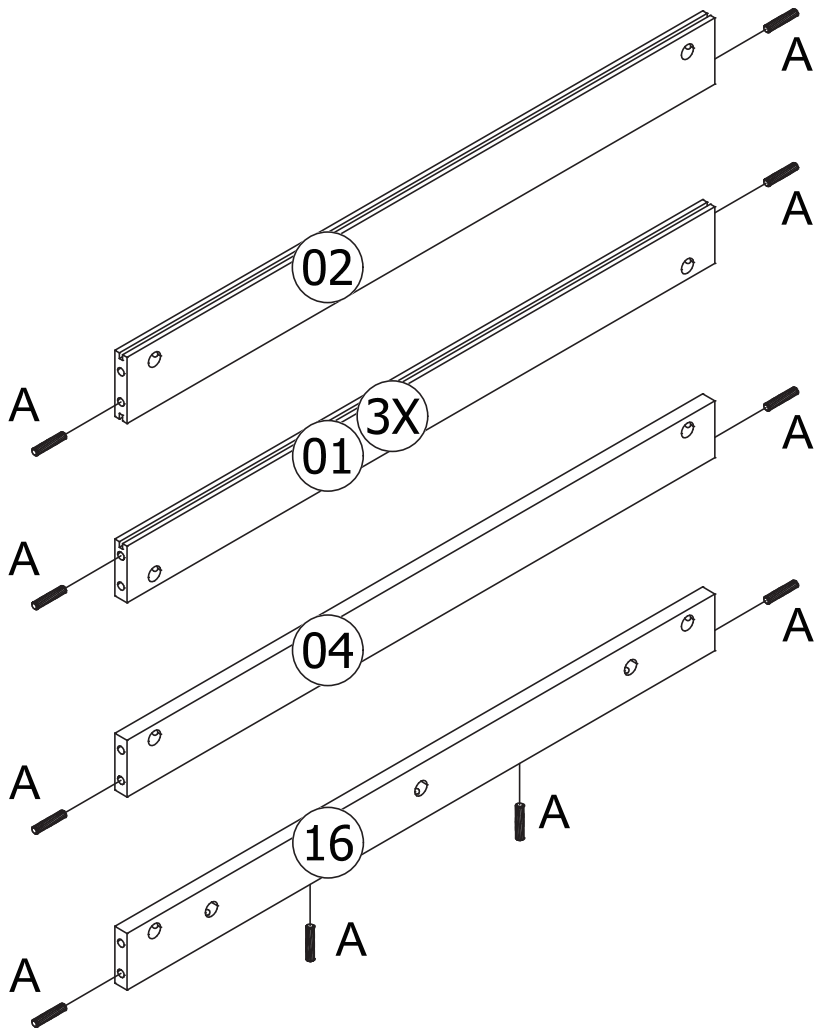


A		Ø8x30mm	14
---	---	---------	----

02

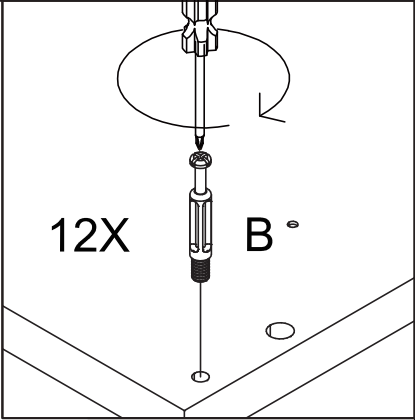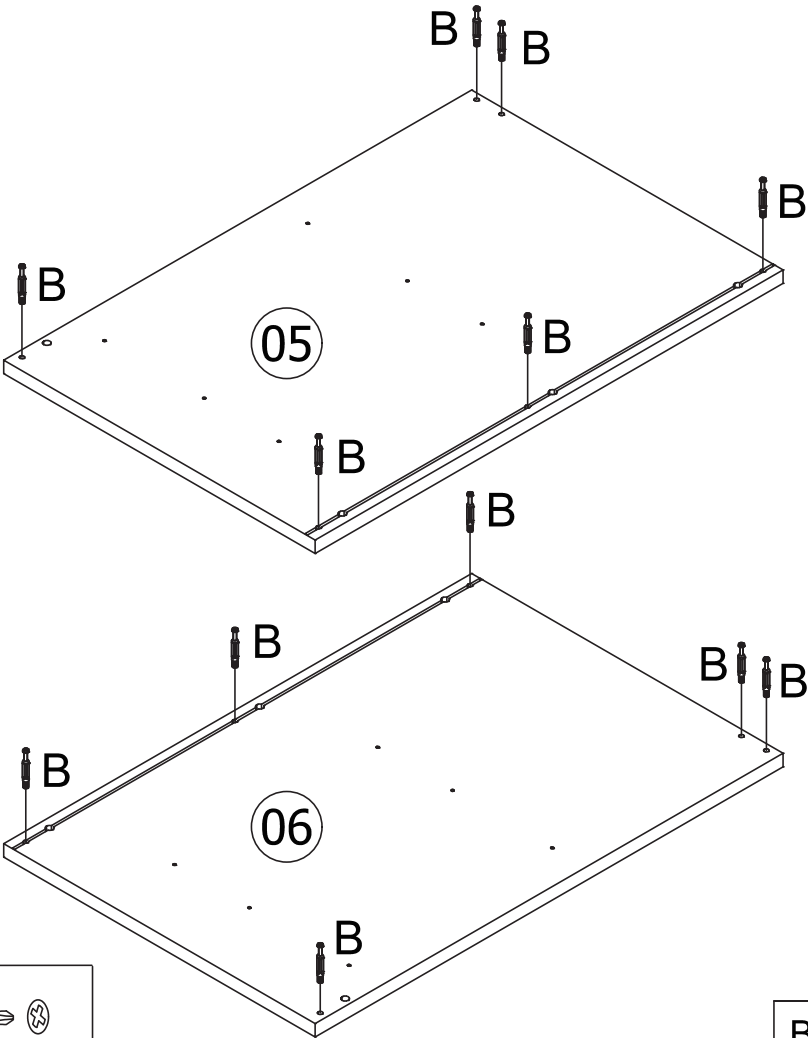

B		M6x40mm	12
---	---	---------	----

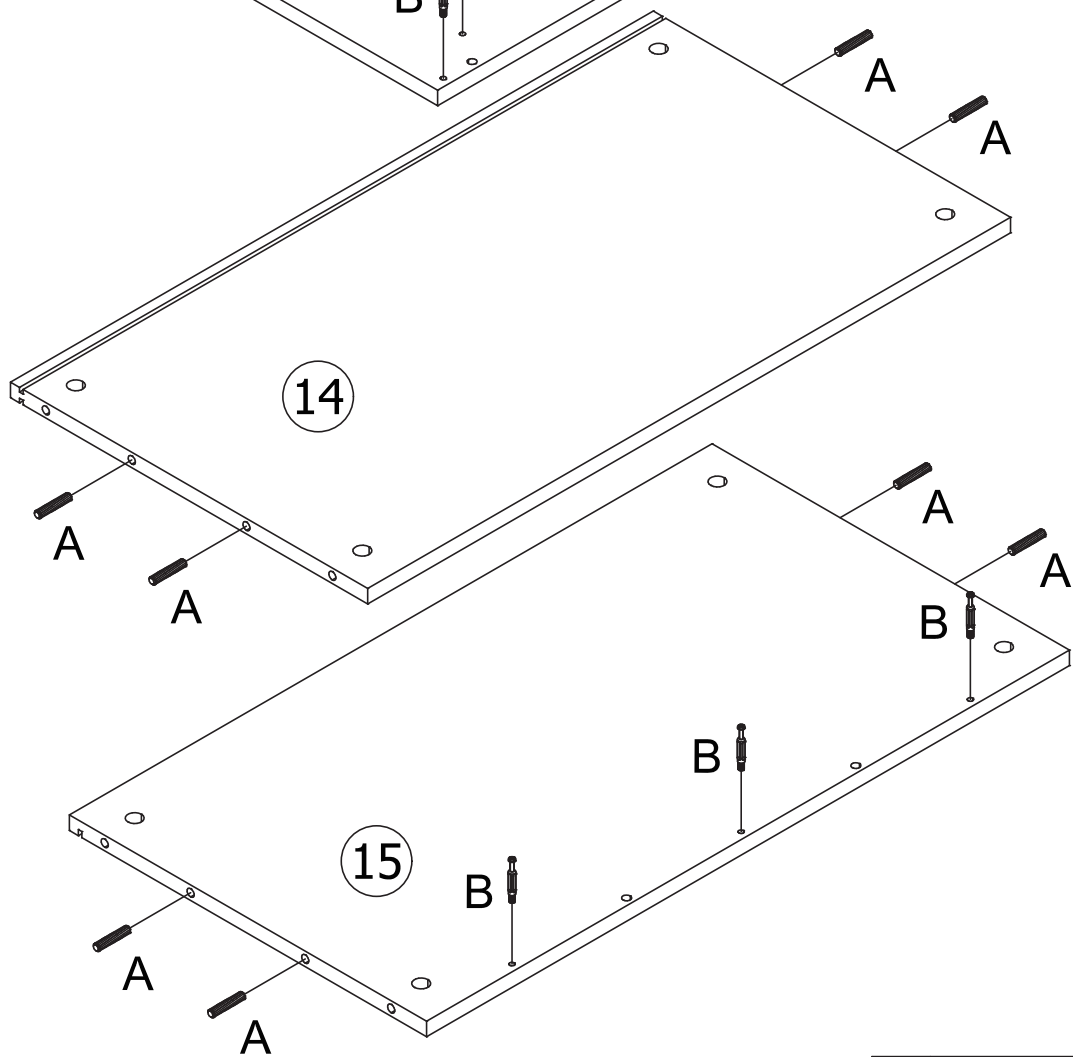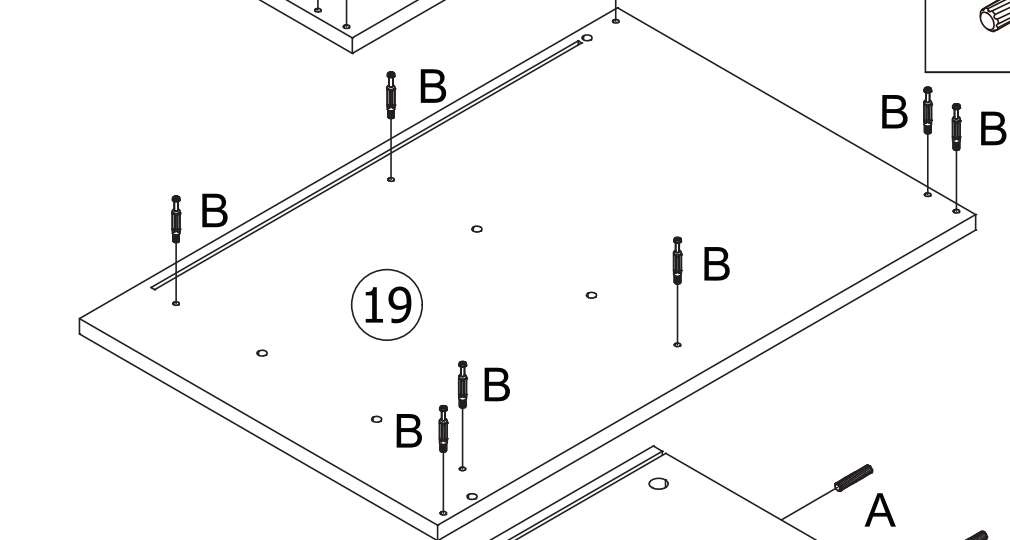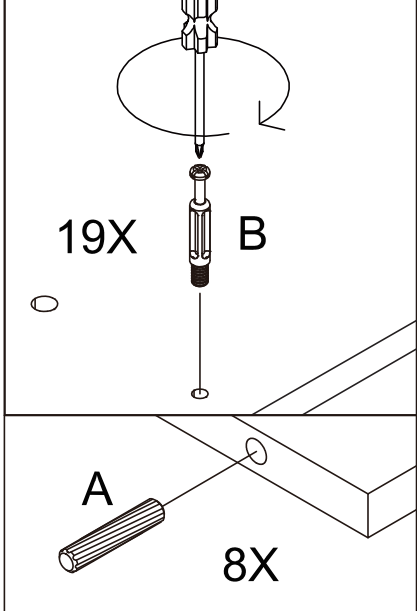
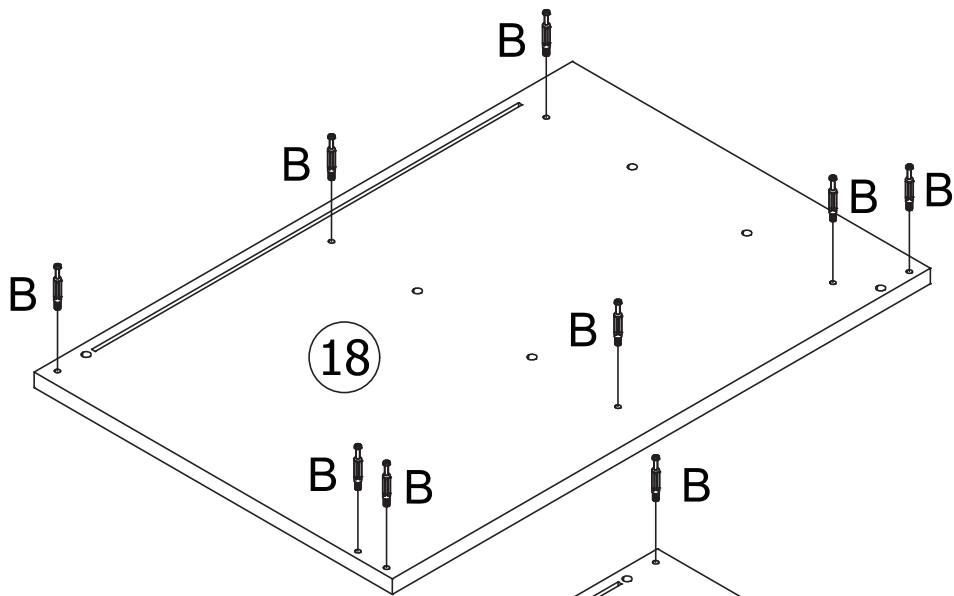


A		Ø8x30mm	08
B		M6x40mm	19


04

$$E = CL + CR$$

$$F = DL + DR$$

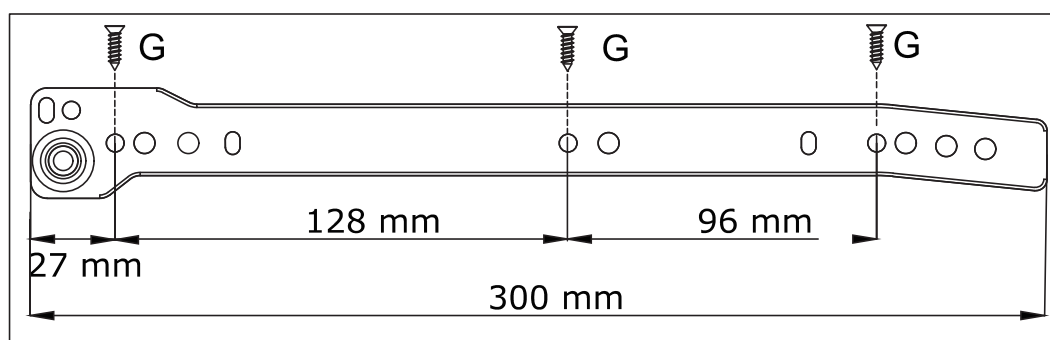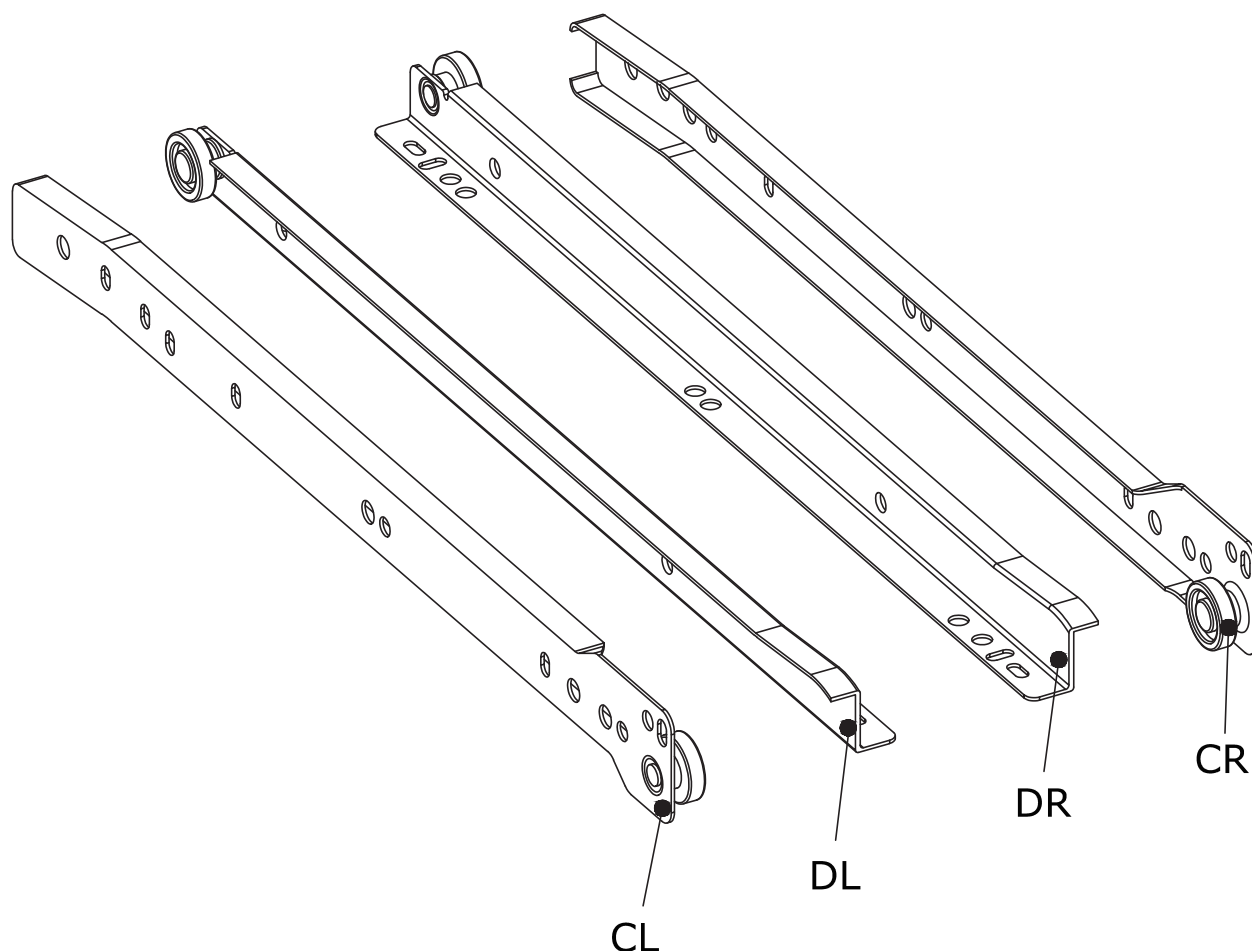


CL x 2
CR x 2

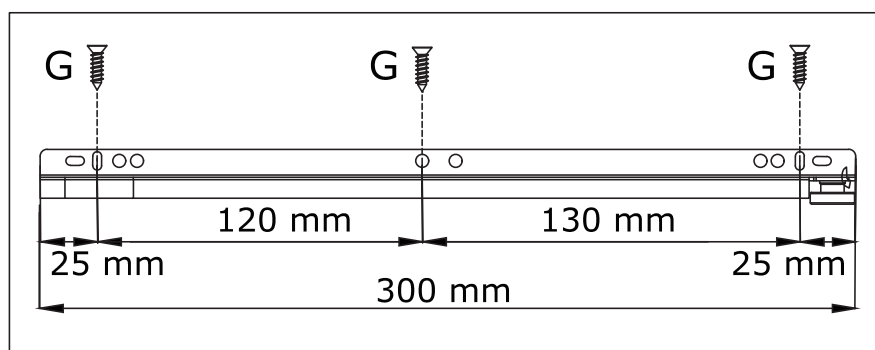


DL x 2
DR x 2

05

$E = CL + CR$



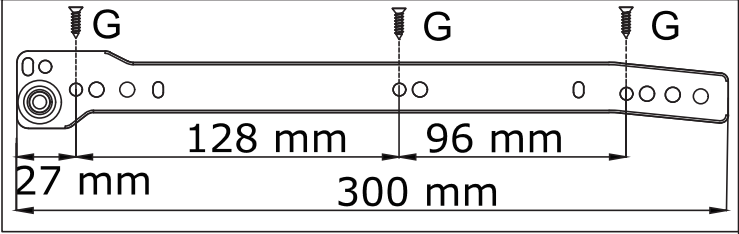


CL x 2
CR x 2

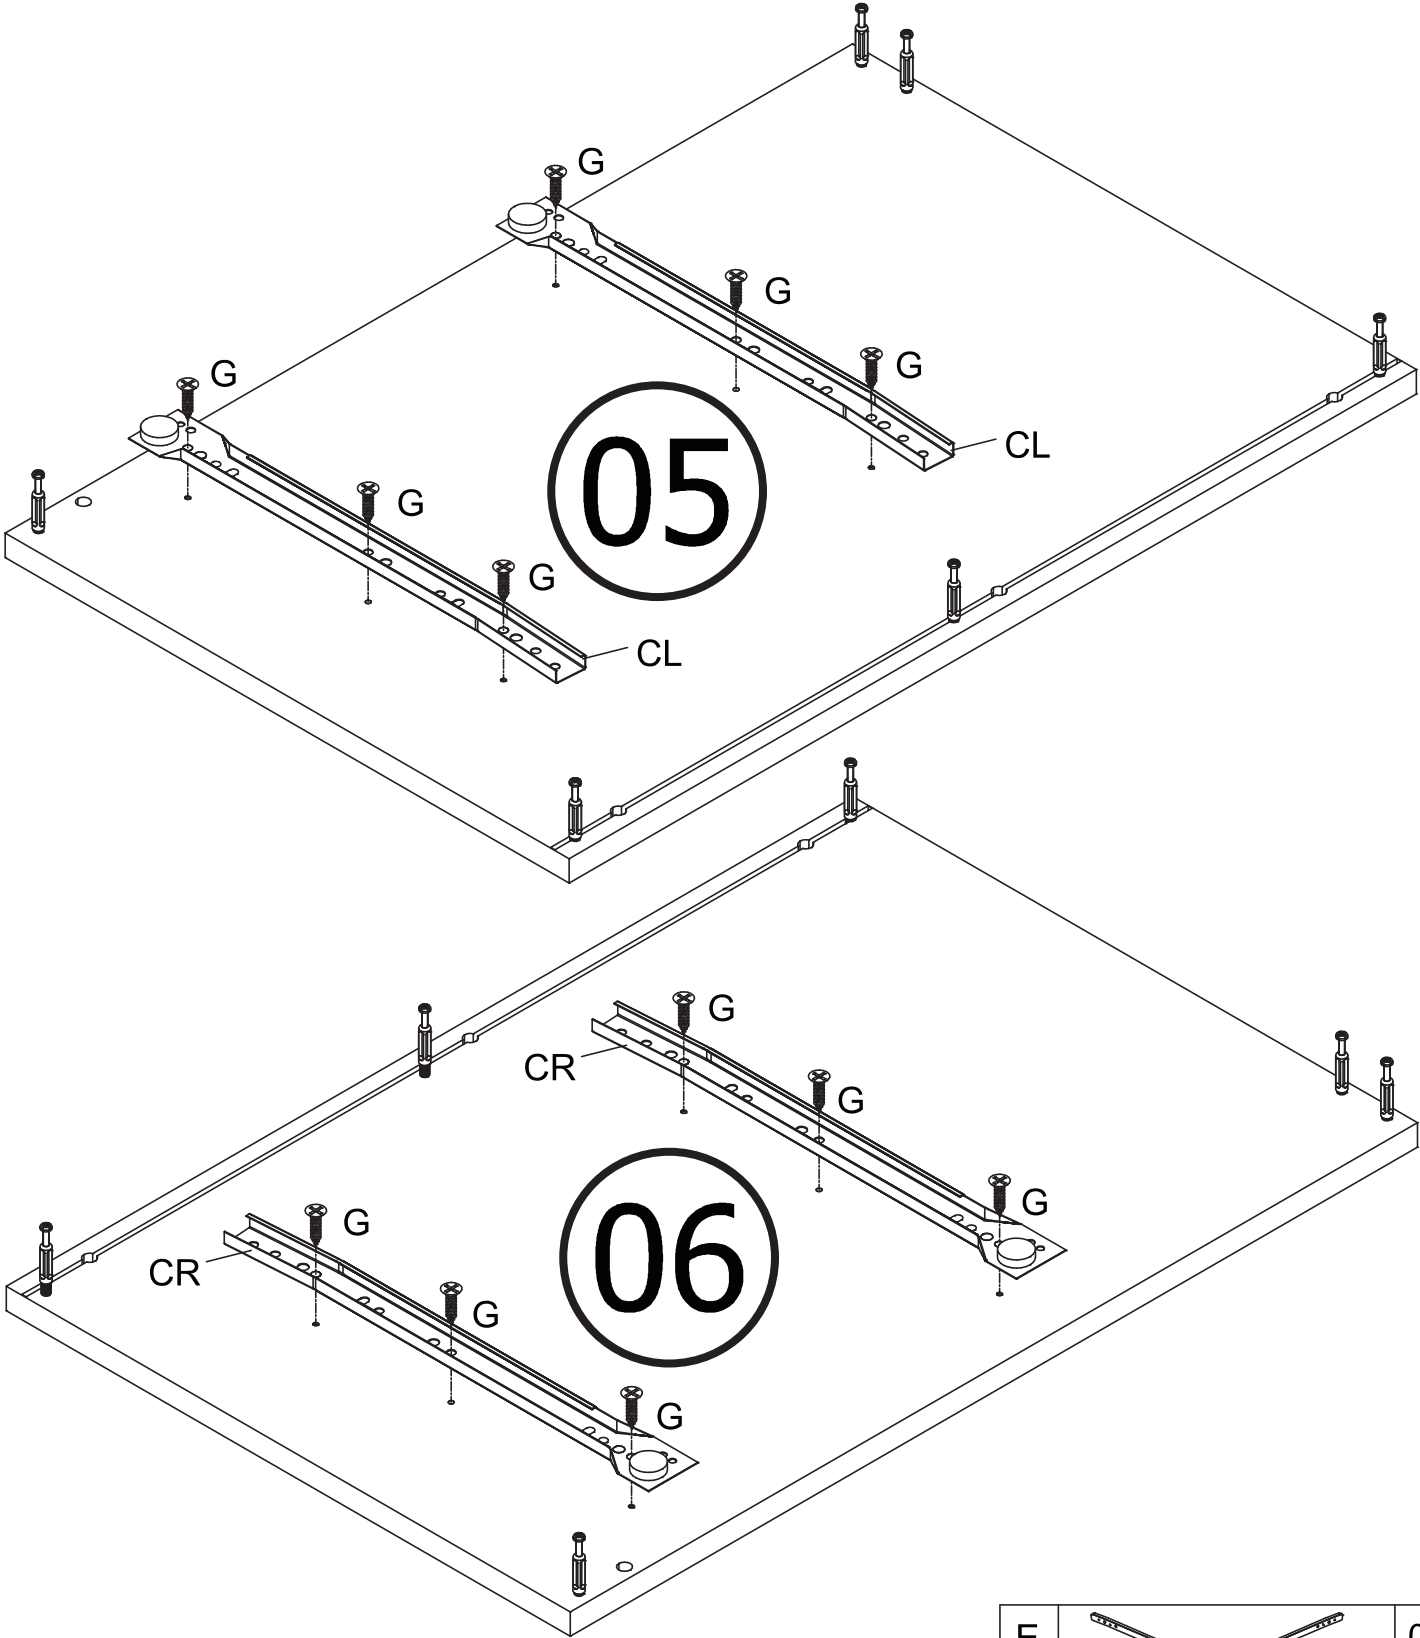

E		04
G	Ø3.5x14mm	12

06

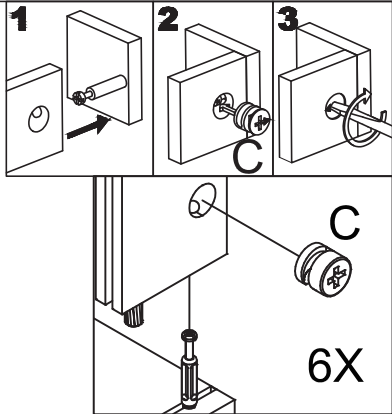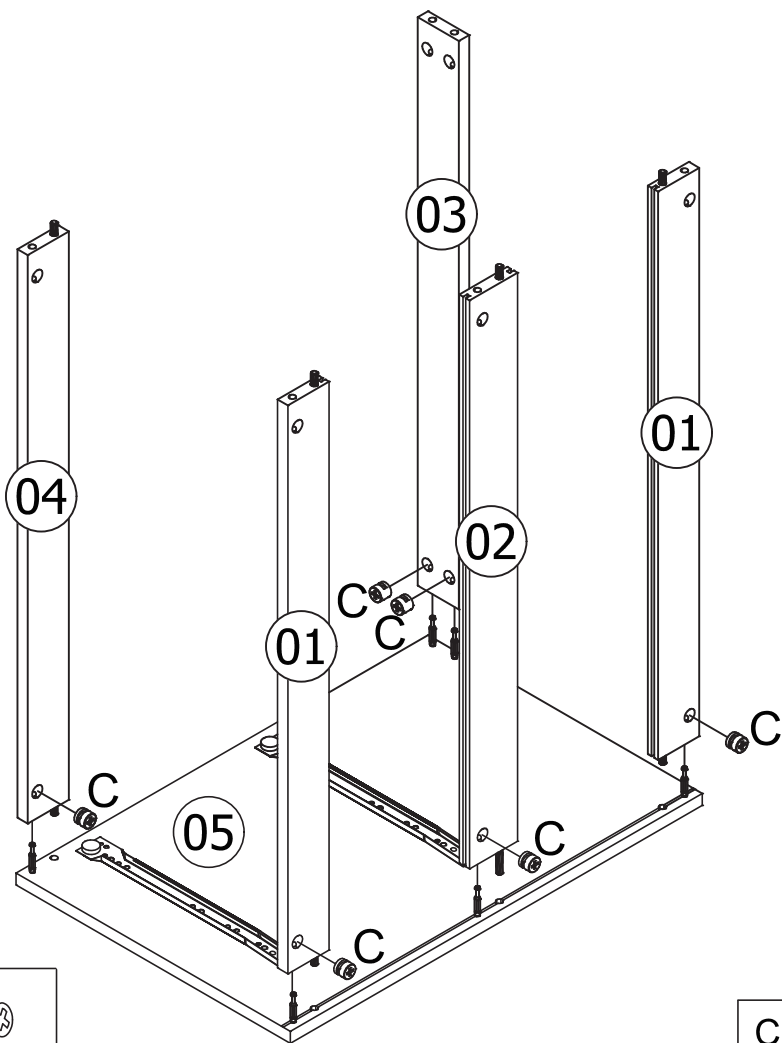


C






Ø15x11mm

06

07


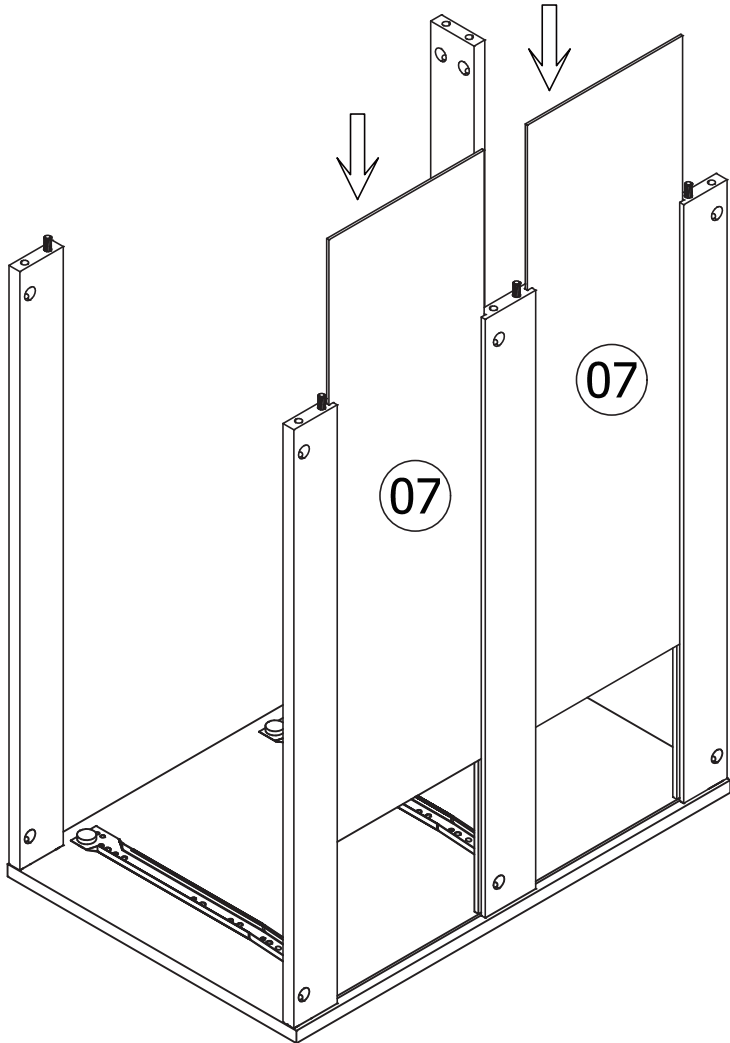


08

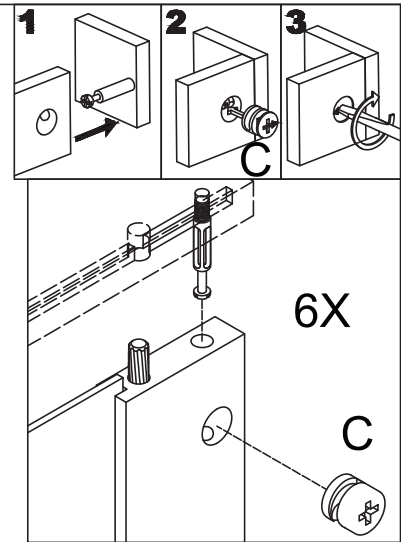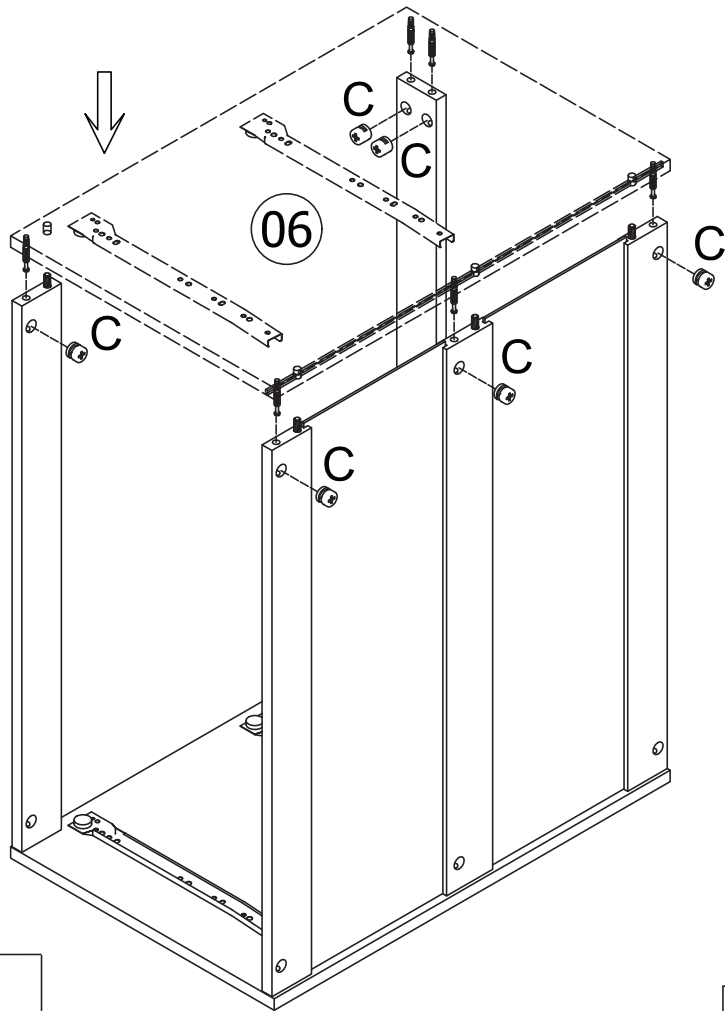



C		Ø15x11mm	06
---	---	----------	----

09

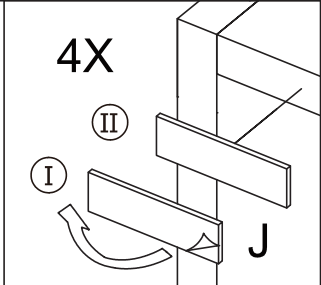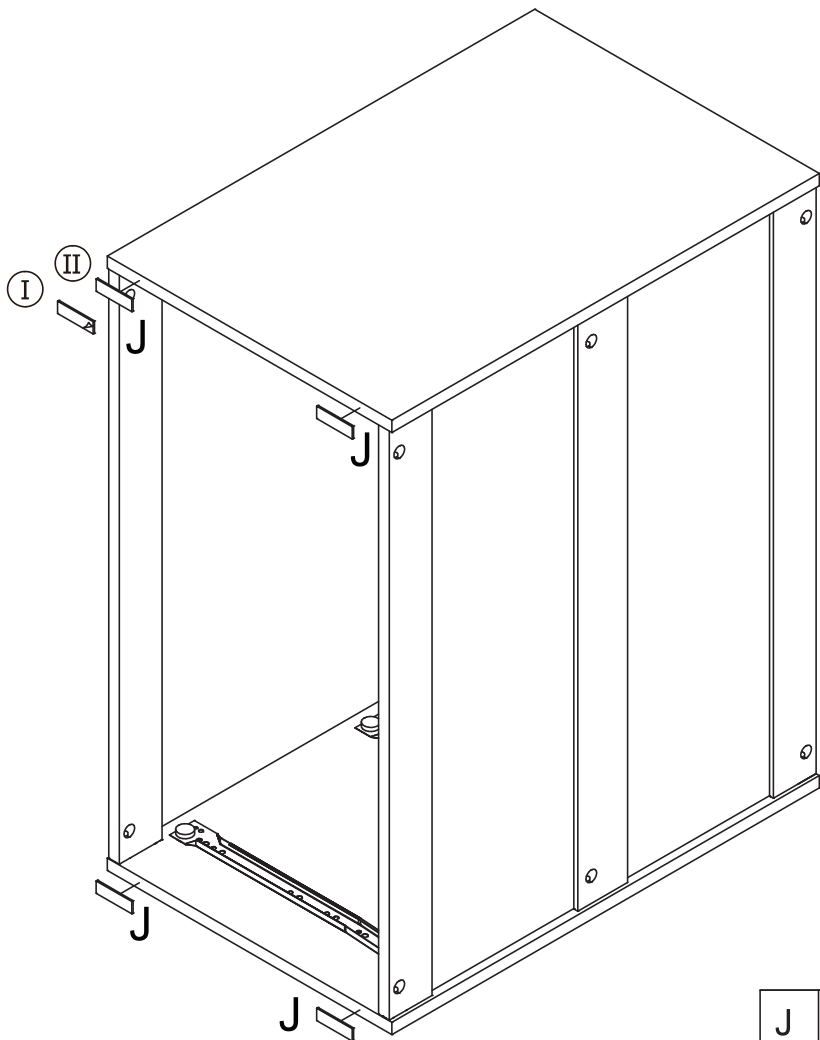




J		50x15x2mm	04
---	---	-----------	----

10

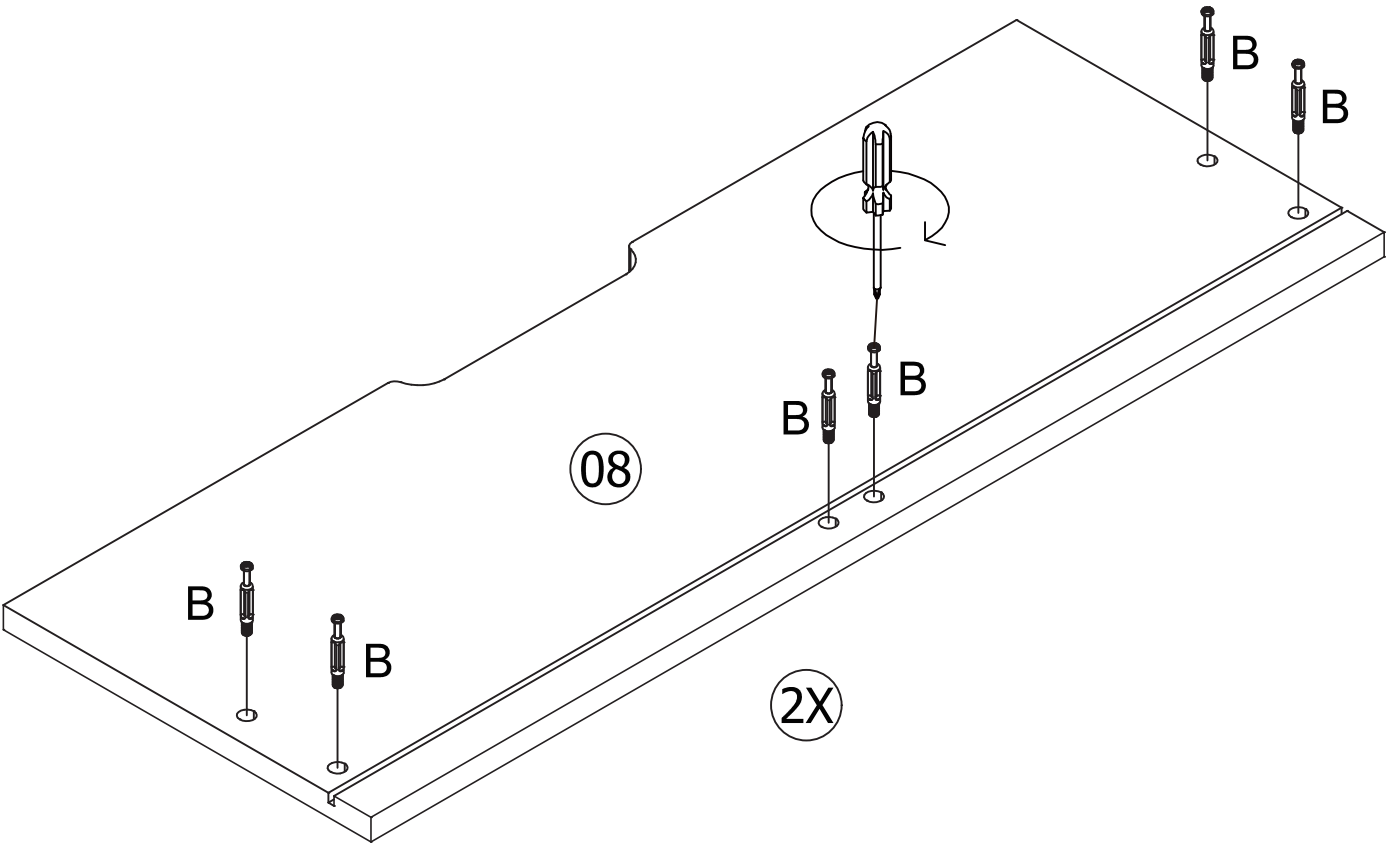


B		M6x40mm	12
---	---	---------	----

11


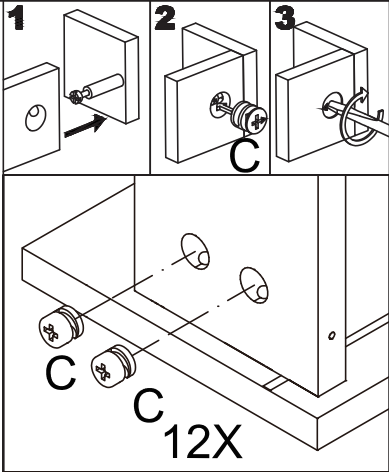
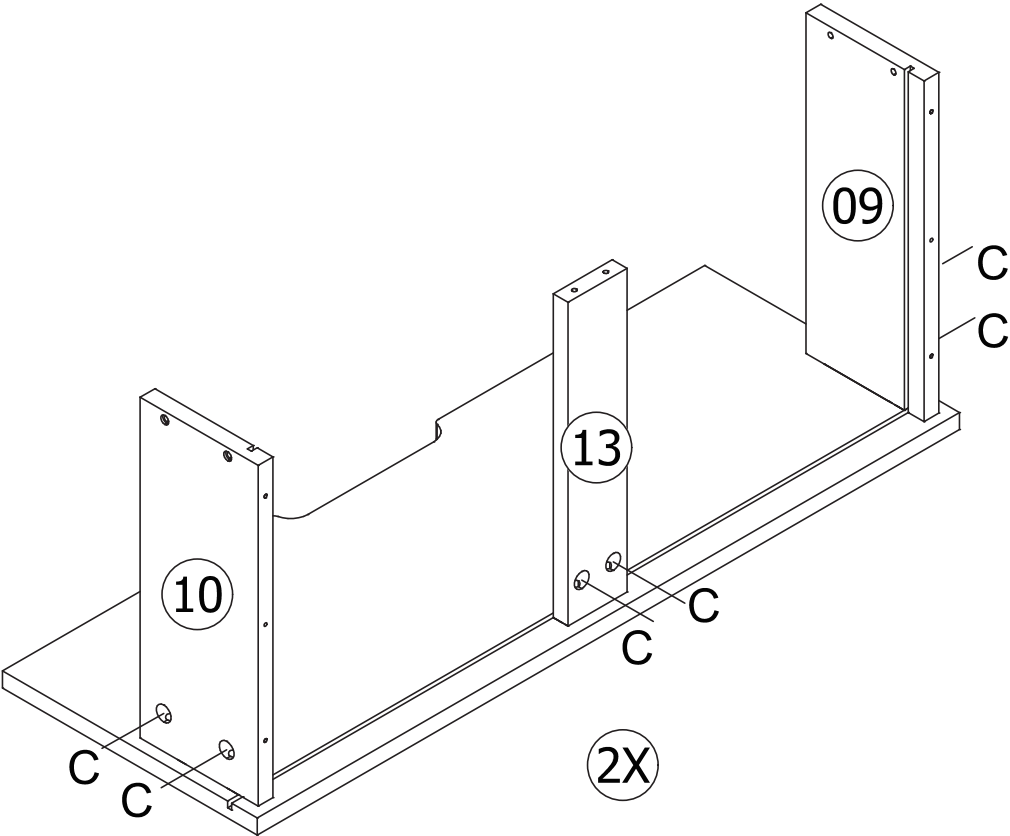


C		Ø15x11mm	12
---	---	----------	----

12


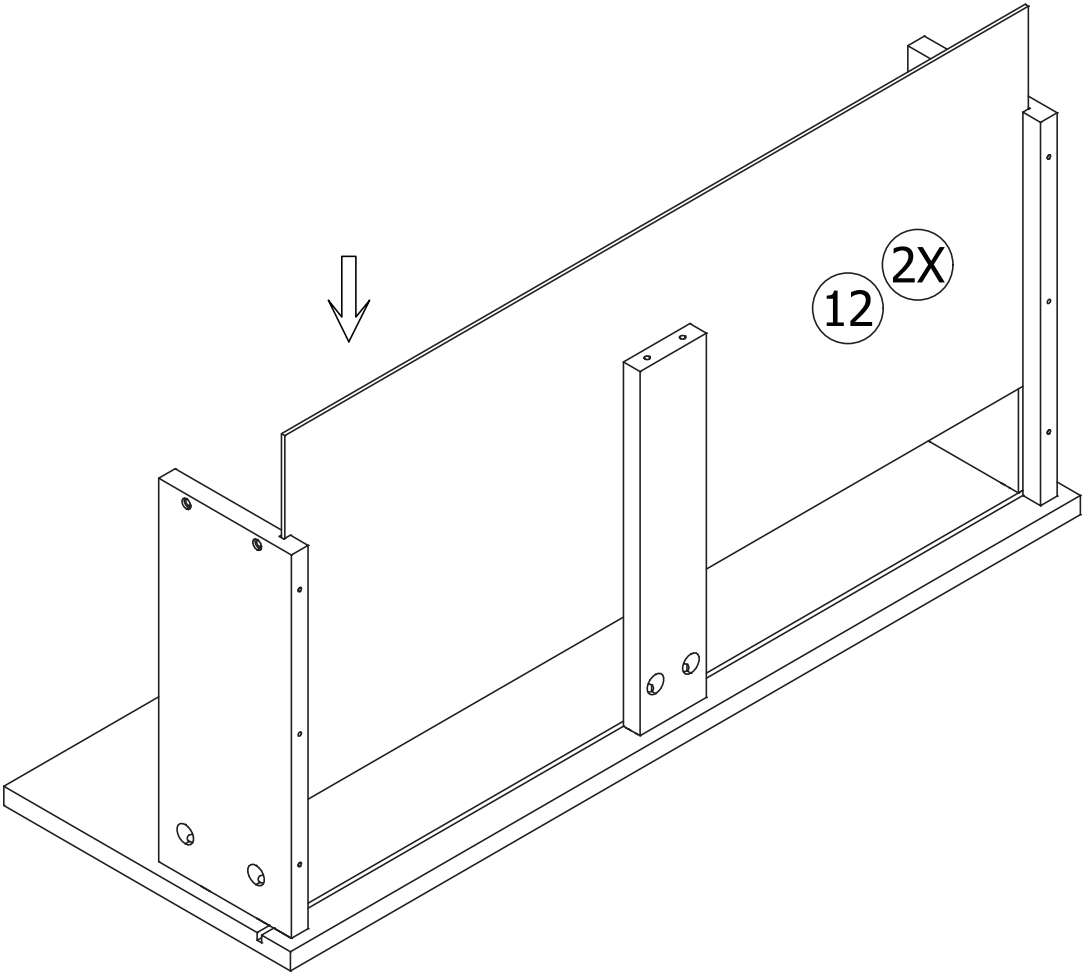


13

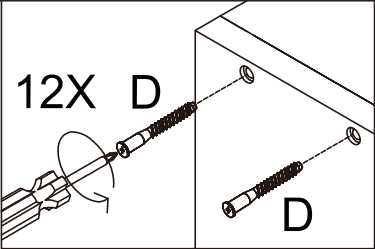
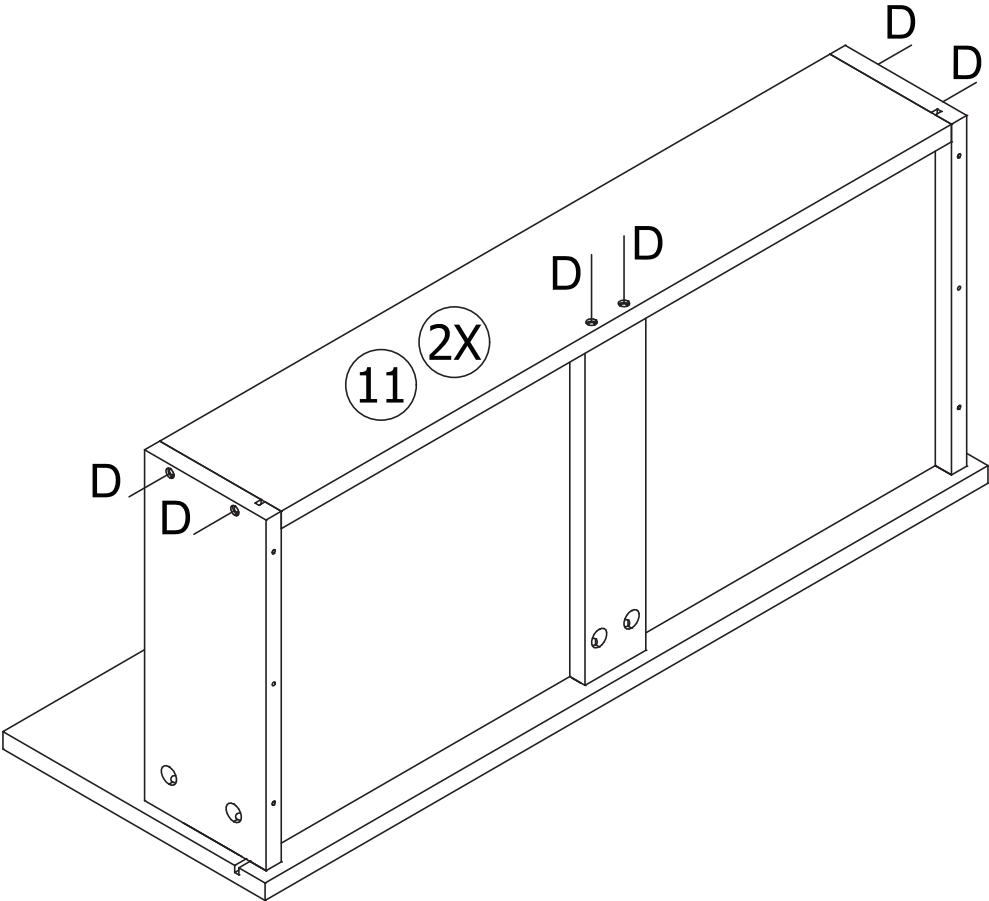


D	 10mm	 Ø5x40mm	12
---	--	---	----

14

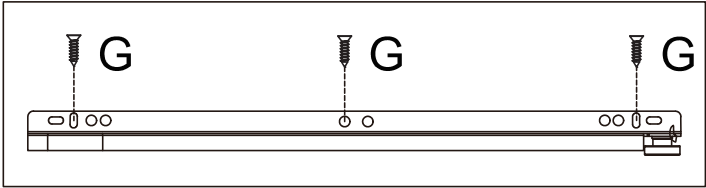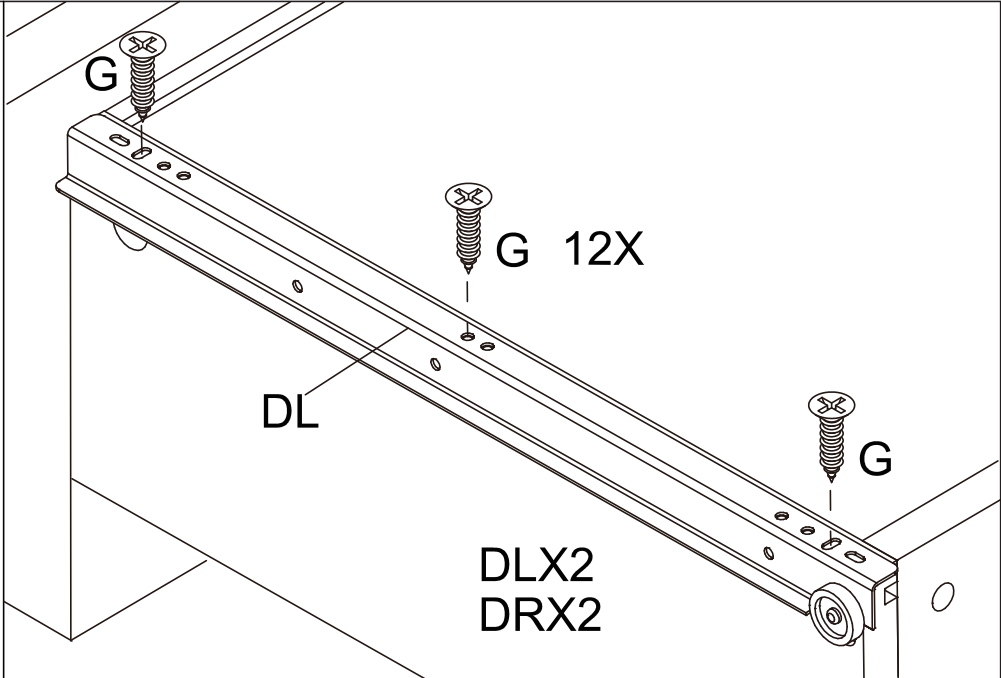


$F = DL + DR$

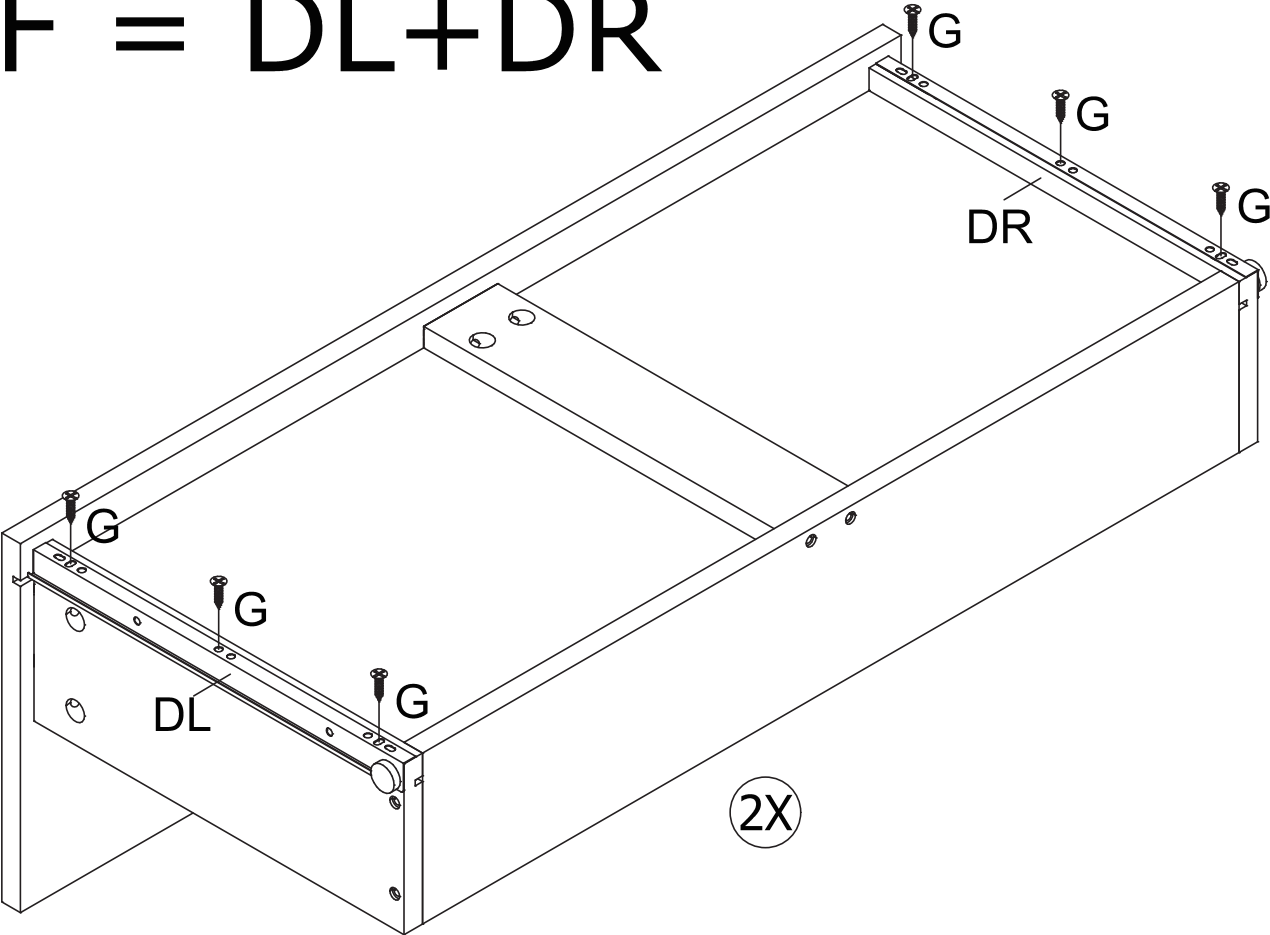


F		04
G	Ø3.5x14mm	12



15

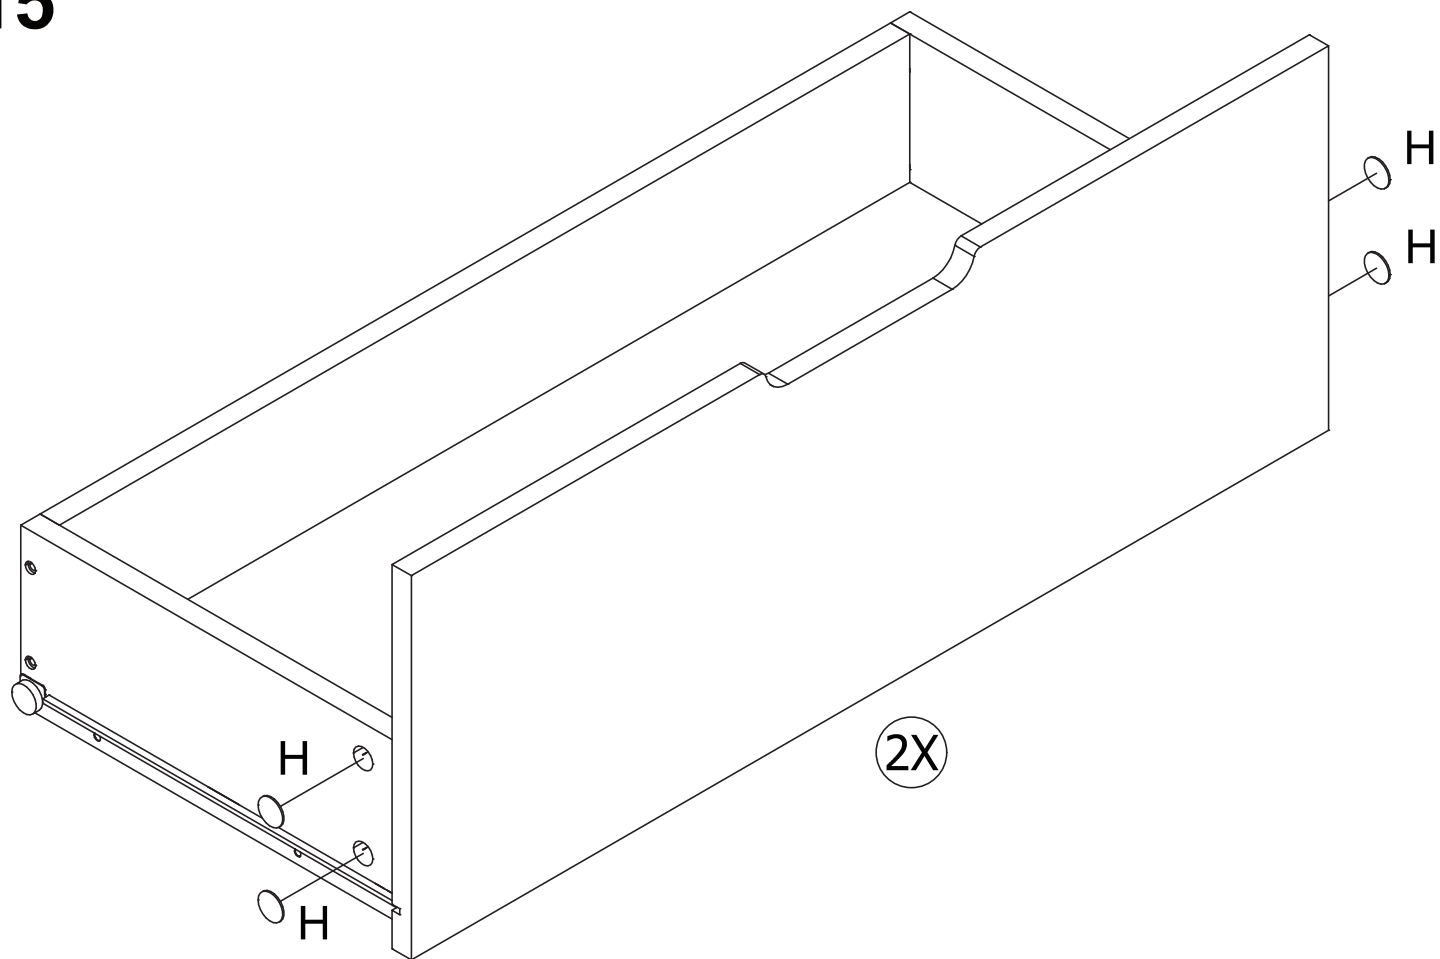




H	O	Ø21mm	08
---	---	-------	----

16

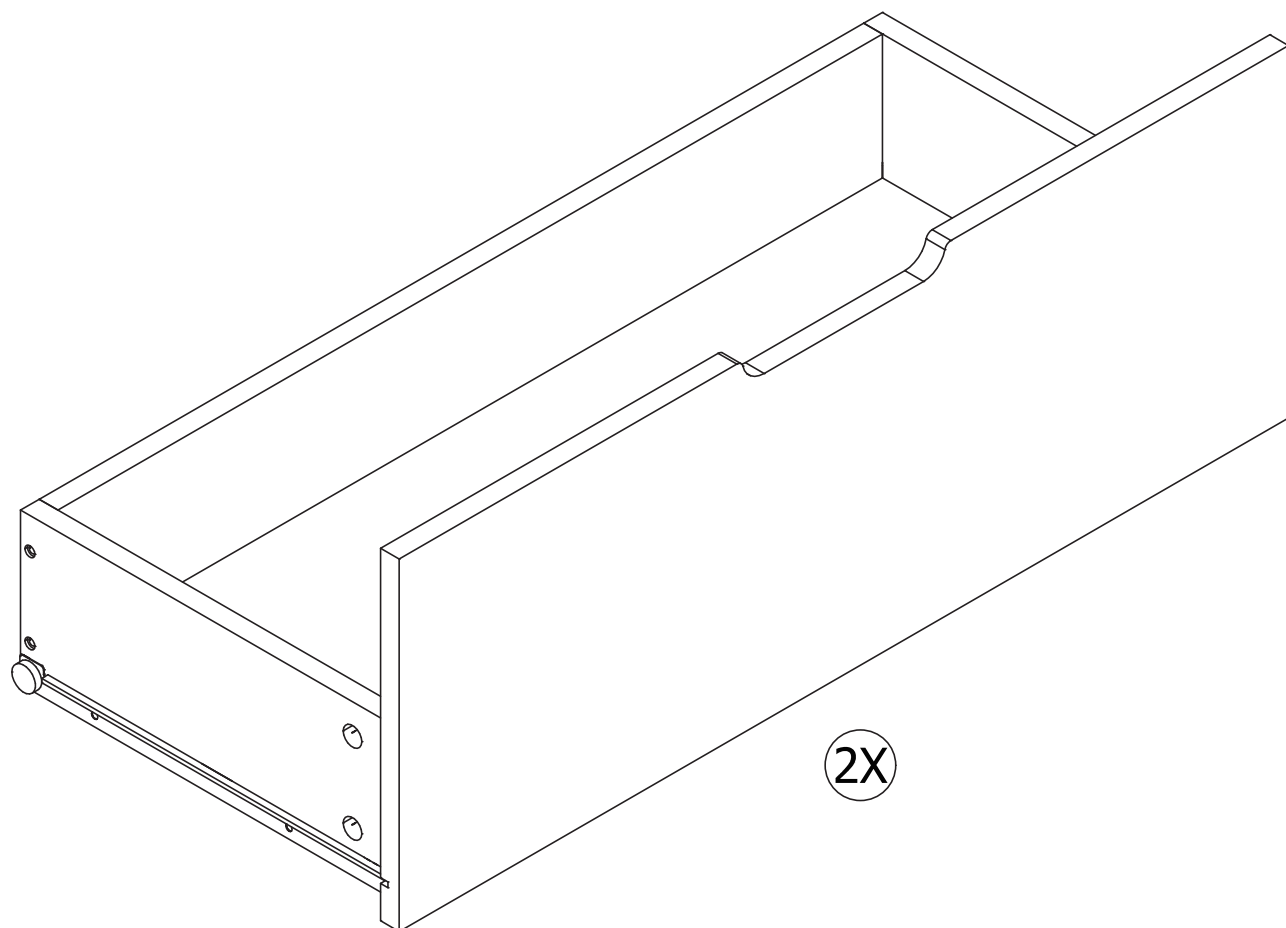


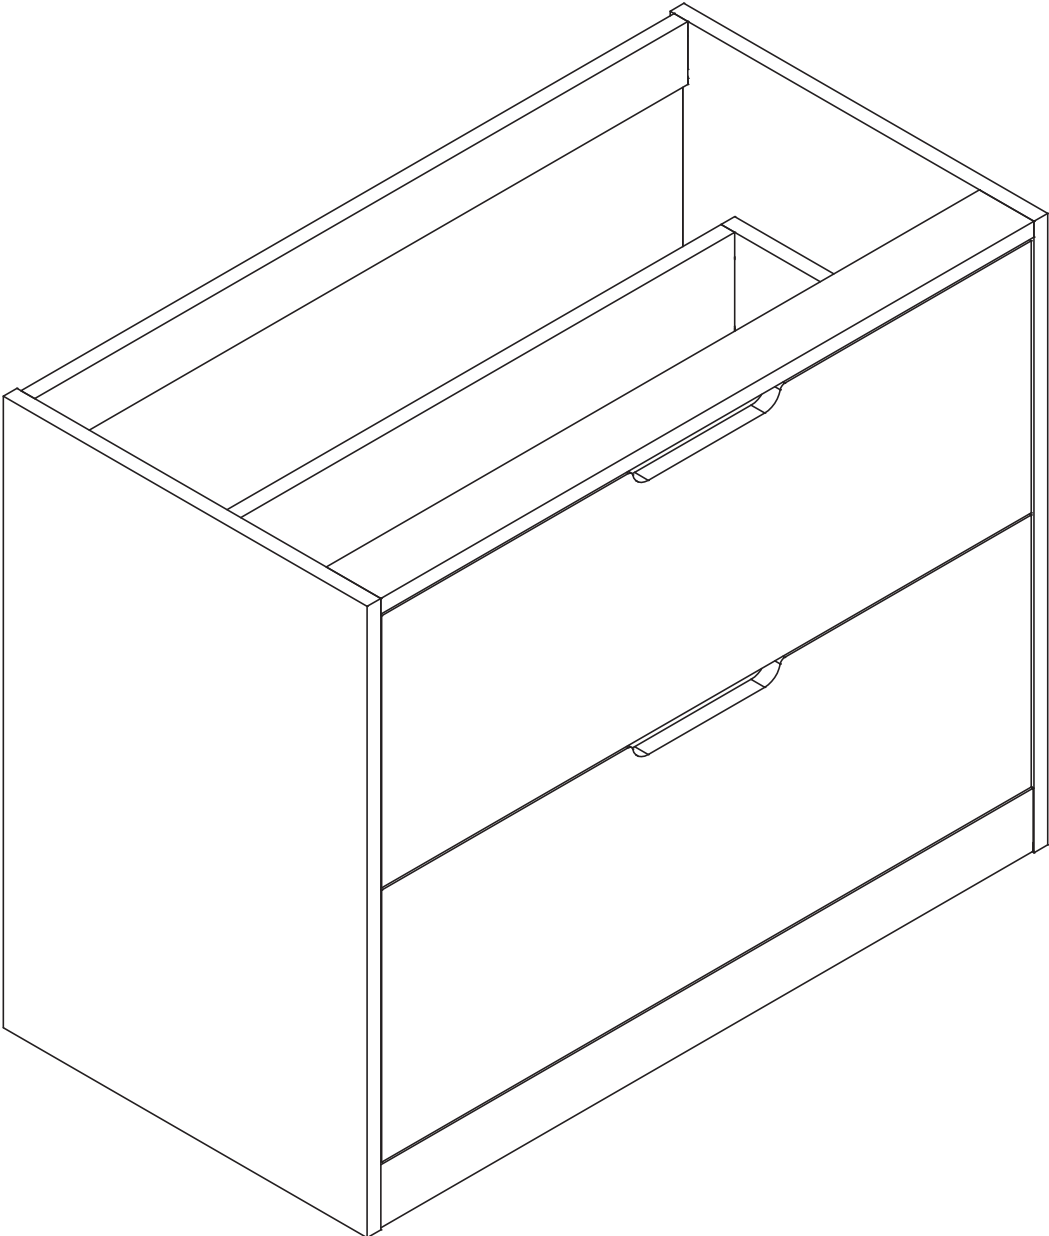
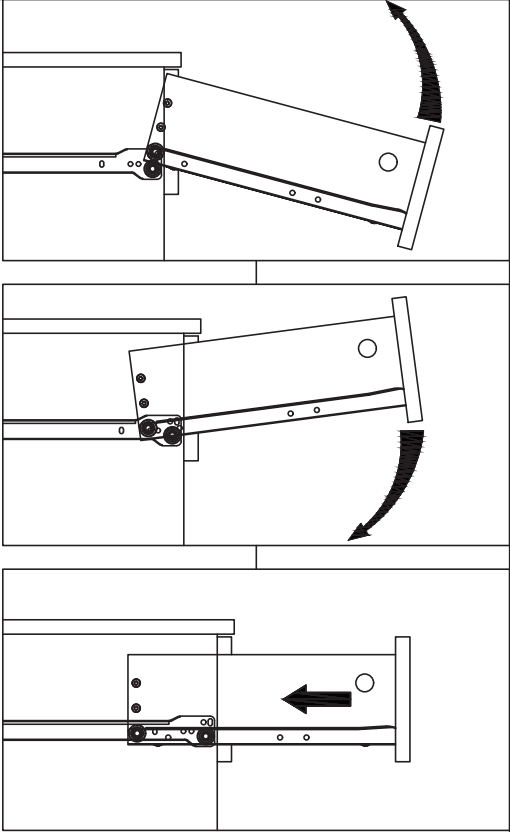


18

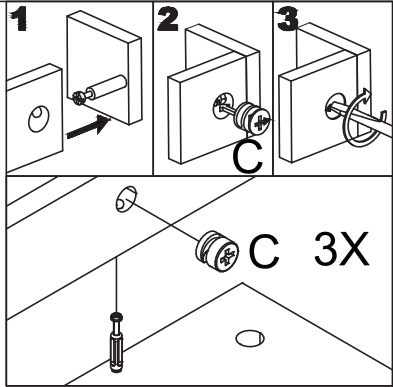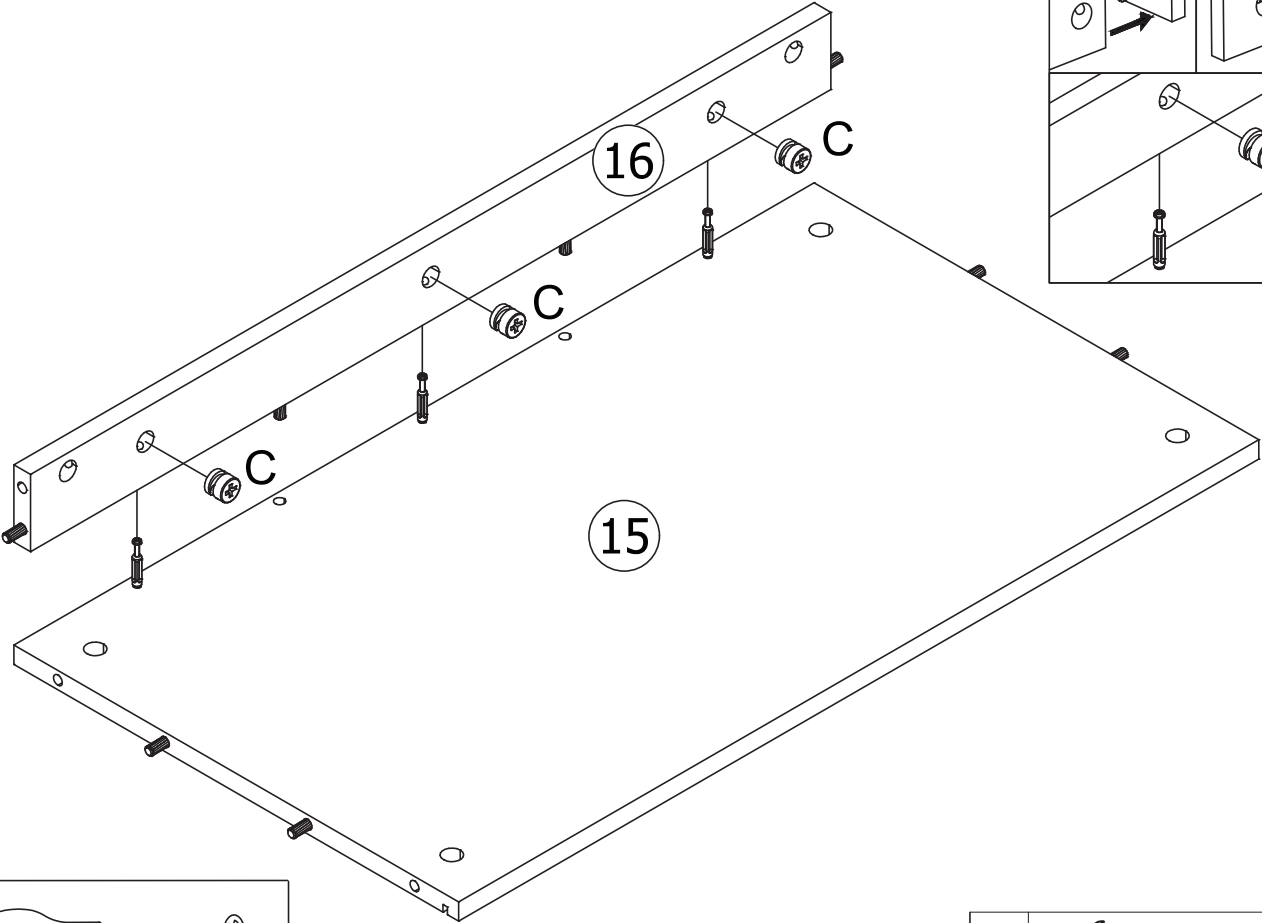


C	 Ø15x11mm	03
---	--	----

19


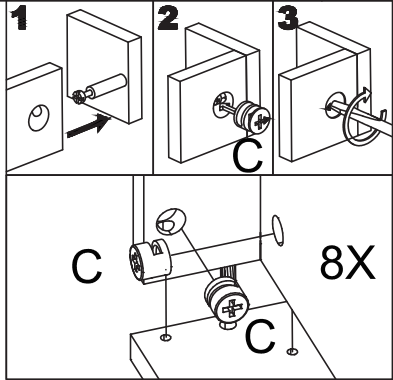
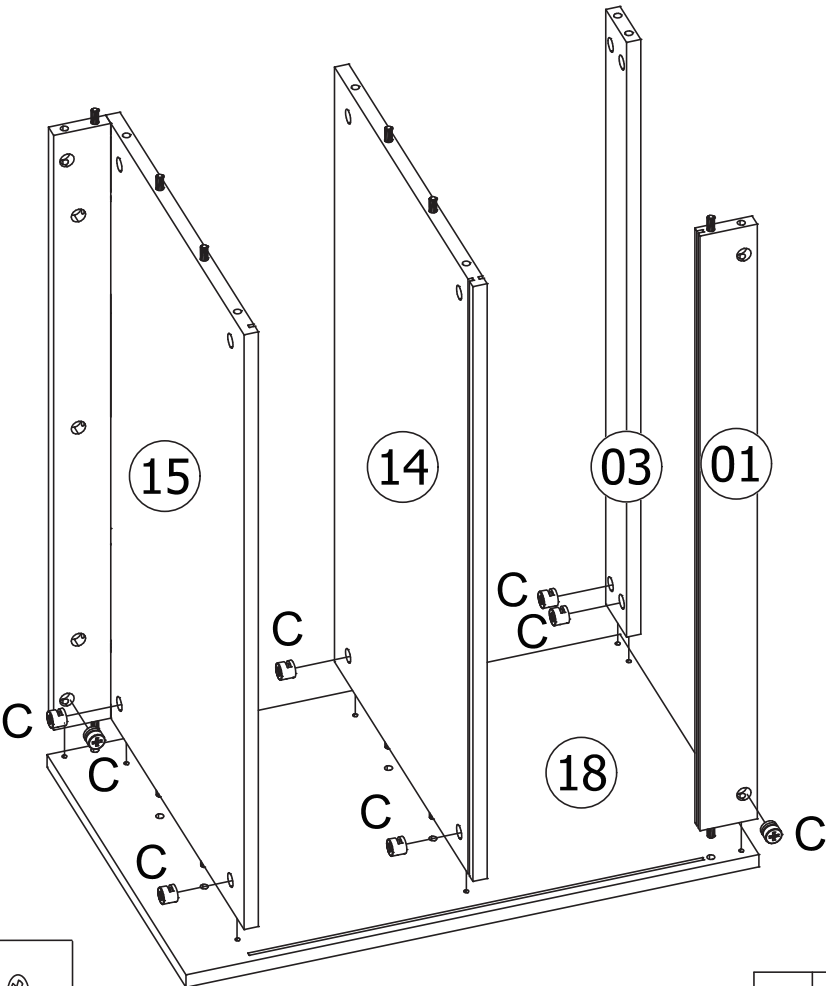


C	 Ø15x11mm	08
---	--	----

20


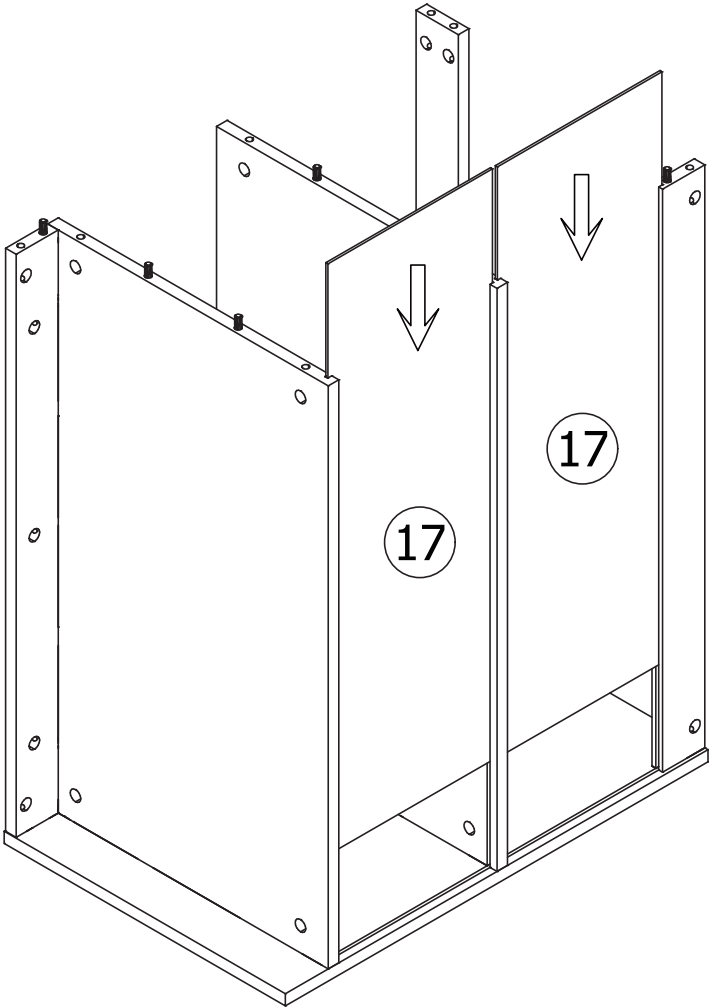


21

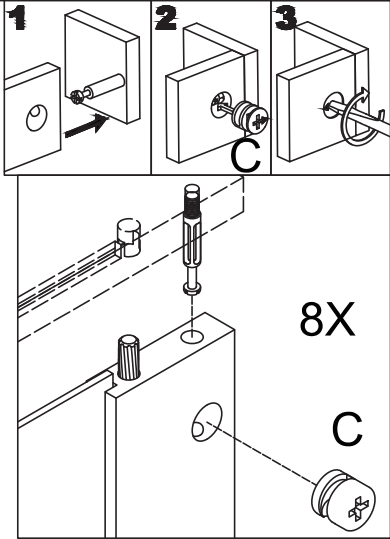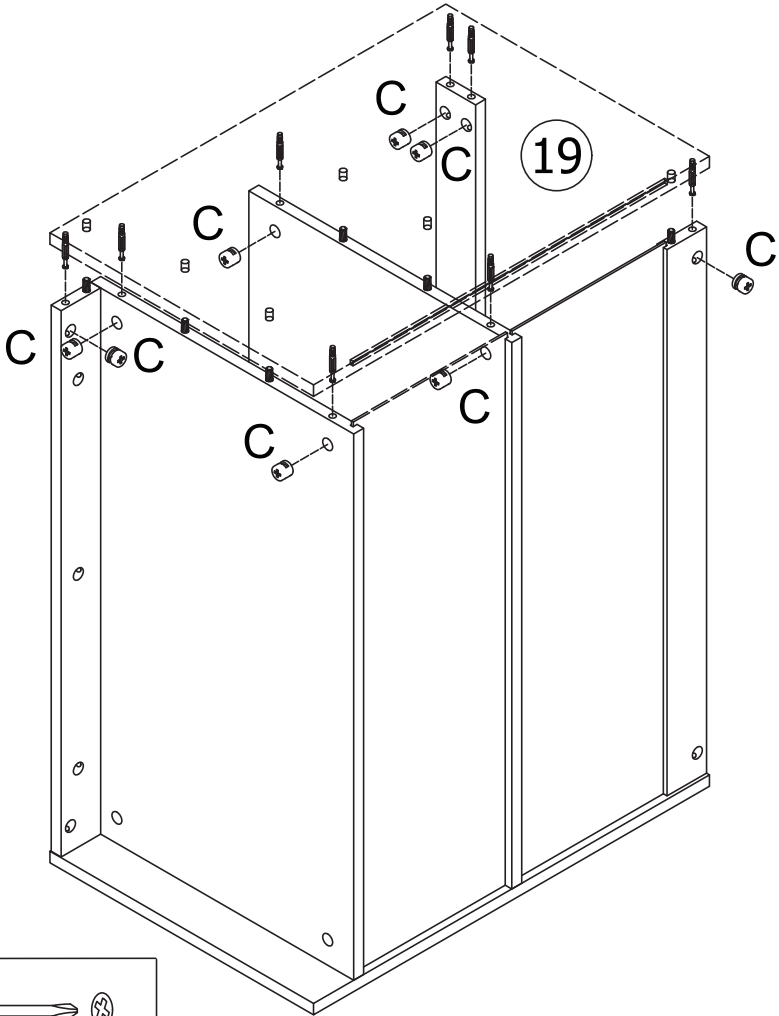



C		Ø15x11mm	08
---	---	----------	----

22

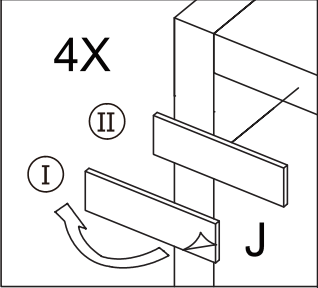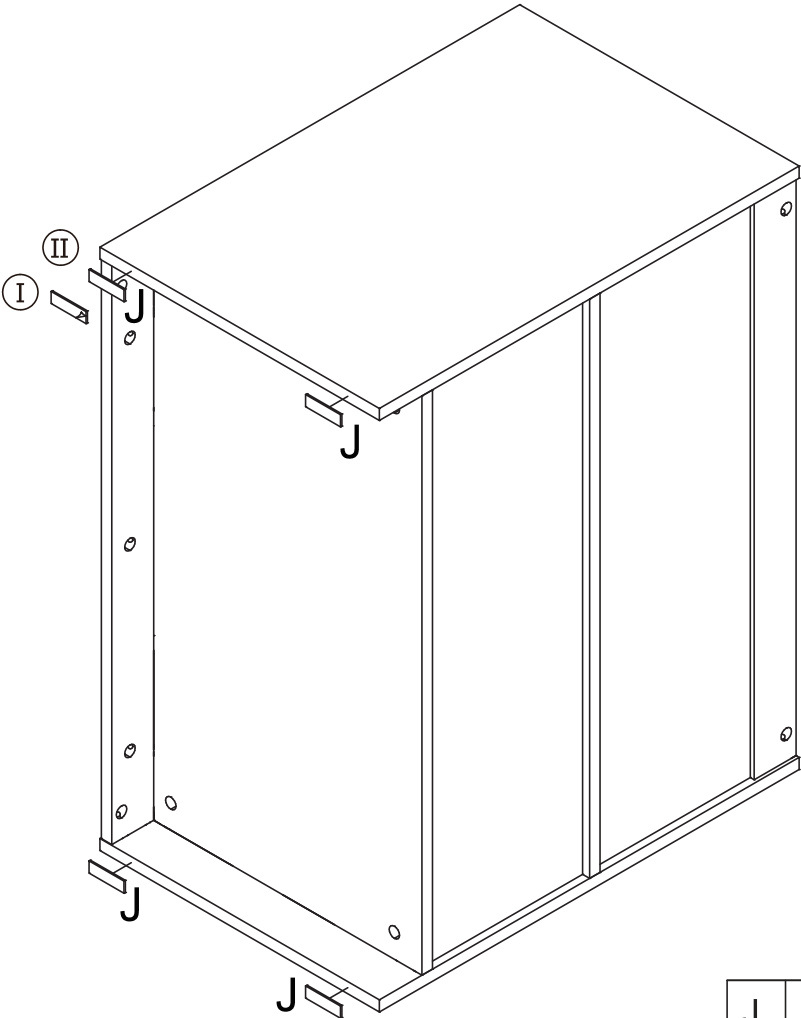


J		50x15x2mm	04
---	---	-----------	----


23

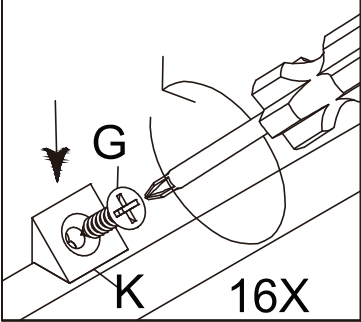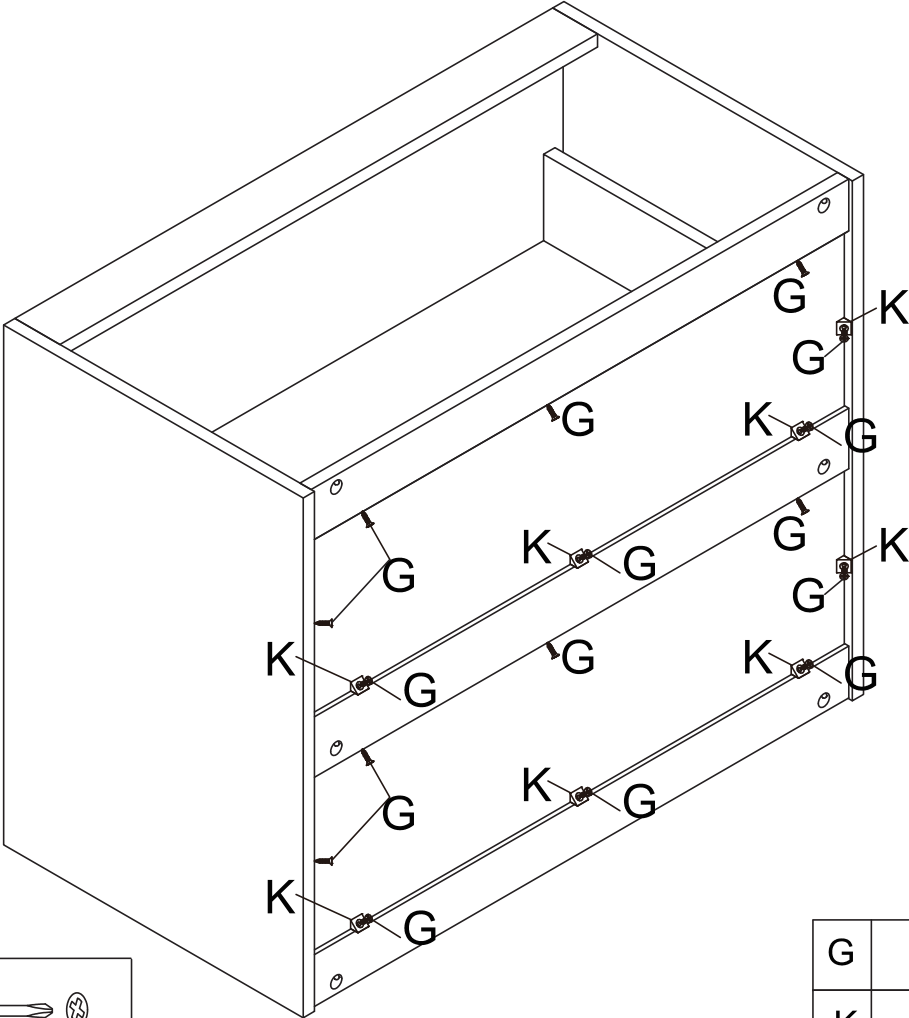

G		Ø3.5x14mm	16
K		15x13X10mm	16



24

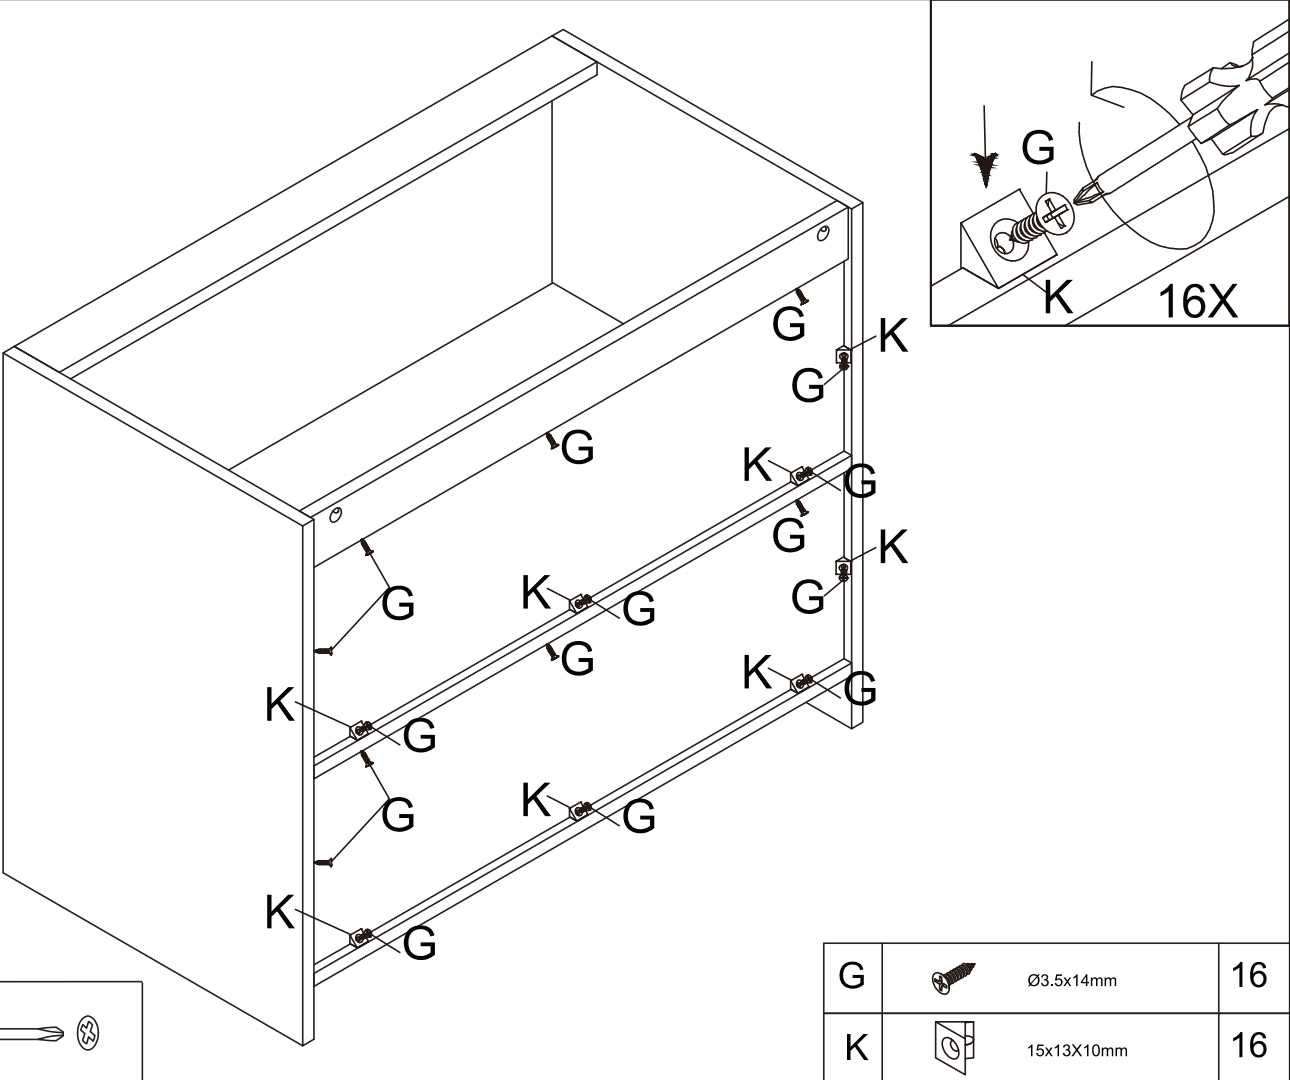

25

